

Drivers Plug & Play

GTSmartstream 3.xx

LSolution 5.xx-3

Install GTSmartstream 3.xx Plug & Play printer driver :	2
Install a rotary machine on USB port :	3
Install an additional engraving rotary machine on USB port :	7
Case n°1 : the engraving machine is different from machines already installed and firmware of the machine is « plug & Play »	7
Case n°2 : the engraving machine is different from machines already installed and firmware of the machine is not « plug & Play »	9
Case n°3 : the engraving machine is the same one that a machine already installed	12
Install a rotary machine on an other port : COM	14
Drive a rotary machine with GravoStyle 5	16
Install Lsolution 5.xx driver Plug & Play :	18
Install a laser machine on USB port	19
Install an additional engraving laser machine on USB port :	21
Case n°1 : the laser machine is different from machines already installed and firmware of the machine is « plug & Play »	21
Case n°2 : the engraving laser machine is different from machines already installed and firmware of the machine is not « plug & Play »	23
Case n°3 : the engraving machine is the same one that a machine already installed	25
Install a laser machine on an other port : LPT (parallel)	26
Drive a bidirectional laser machine with GravoStyle 5 (LS100 / LS100 Ex)	30
Drive a no-bidirectional laser machine with GravoStyle 5 (LS800 / LS900)	38
Drive a laser machine with your usual graphical editor (Corel Draw, Autocad, Adobe Illustrator...)	40
Frequently Asked Questions :	41
What is a bidirectional laser machine ?	41
How to know if the firmware of the machine is “Plug & Play”?	41
How to know the name of the machine and the version of the firmware ?	41
Is there an order to install several machines plugged on the same PC ?	43
Which driver to use with a machine ?	43

Install GTSmartstream 3.xx Plug & Play printer driver :

Power off the machine. Unplug from your PC.

Power up PC. Let Windows operating system start.


Run a session as Administrator. A standard user has no right to make a setup in Windows

Open the folder with GTSmartystream 3.00 driver


- If GravoStyle5 Version 4 is already installed, open C:\Gravostyle5400\DRIVER\ folder



- If not, Explore the « Gravostyle5 Version 4 » DVD : D:\Gravograph\added\DRIVER folder

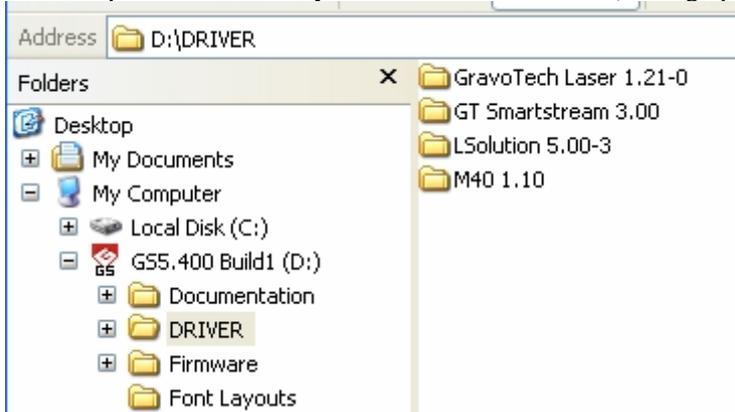

Double click on setup.exe :

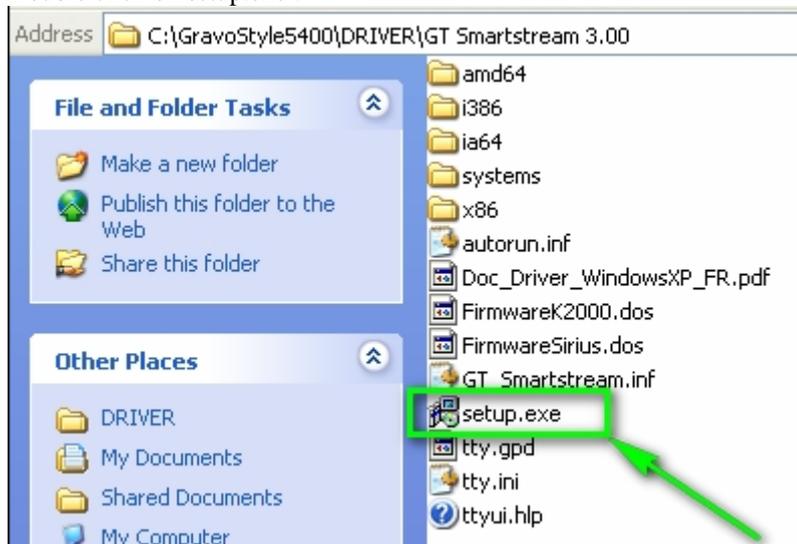


Select the port used for the connection between the PC and the machine :





Install a rotary machine on USB port :

Select USB
Click on « Next »


If the machine was switch on, a message ask to switch off it.
If GTSmartstream drivers were installed, then they were deleted:

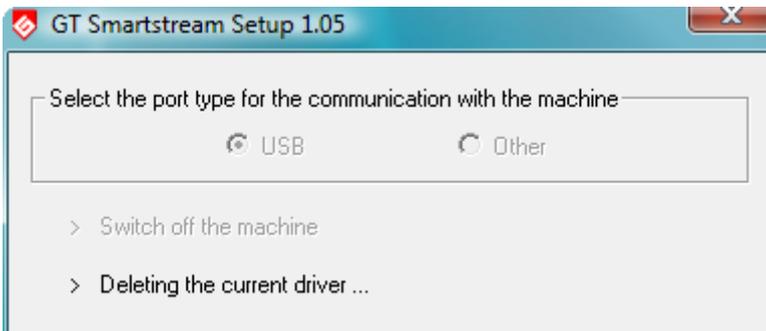

A message notified that driver is not windows certified.

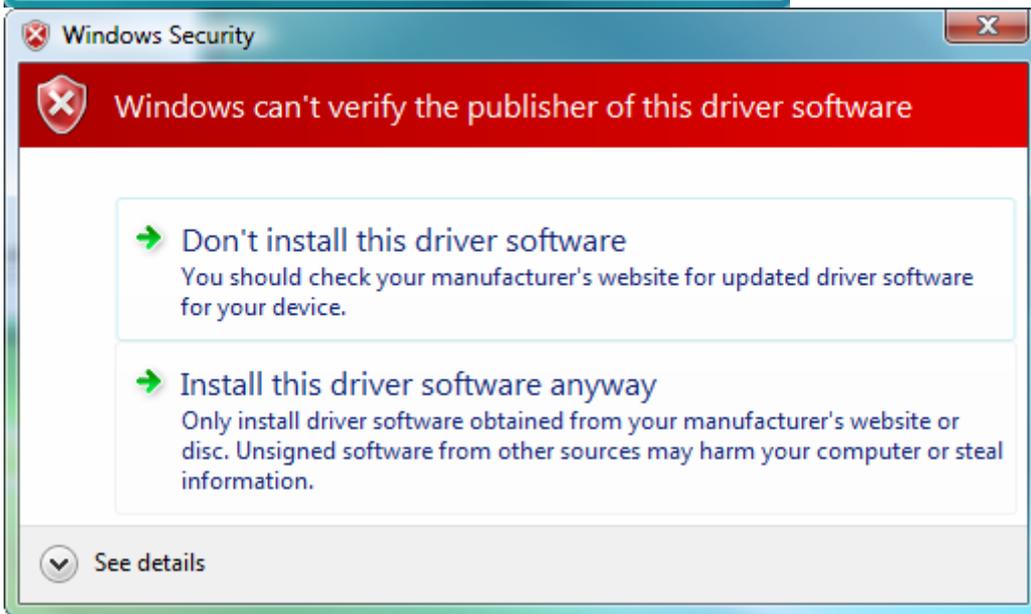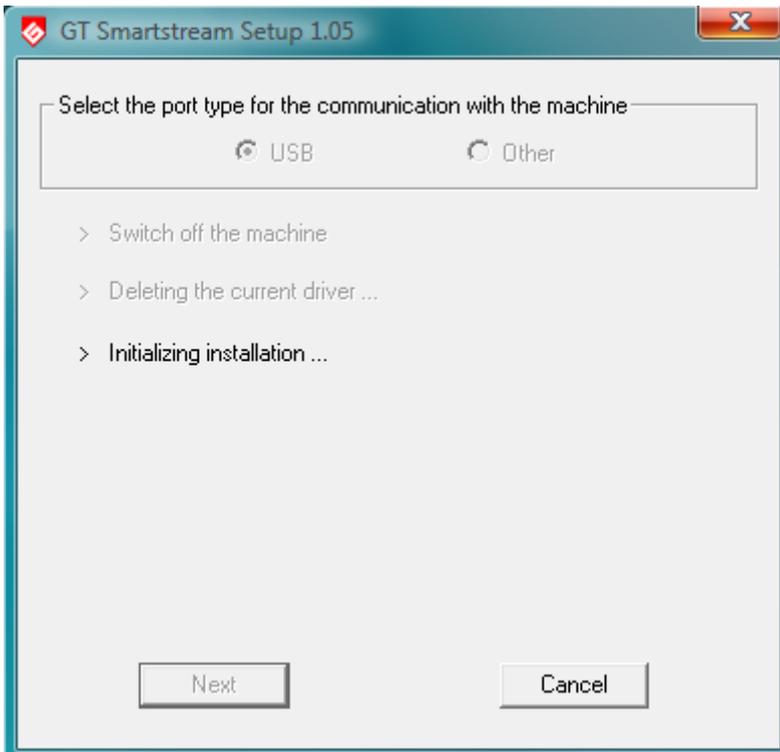


Click on « Install this driver software anyway »

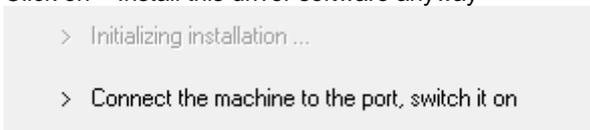


Connect the machine to the port and switch it on :

→ if the firmware of the machine is not Plug & play, then there is a firmware update :

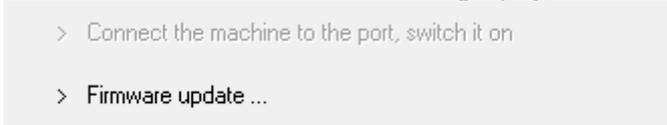


 A message displays to switch off the machine :




Switch off the machine :

→ A message displays to switch on the machine :

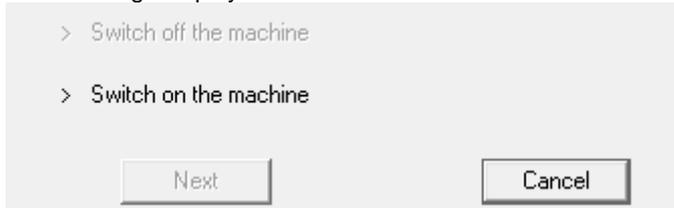


Switch on the machine :


→ a tooltip displays « Installing device driver software » :

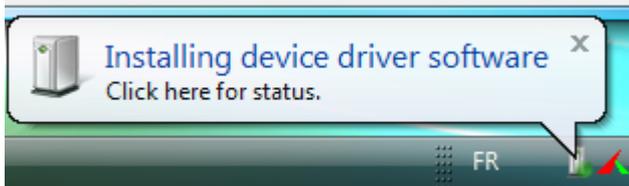


→ a tooltip displays :

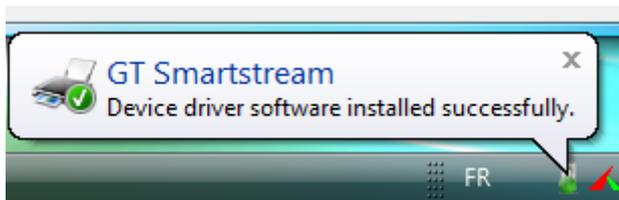

Click on « Printers » in « Start » menu (or in Control panel)

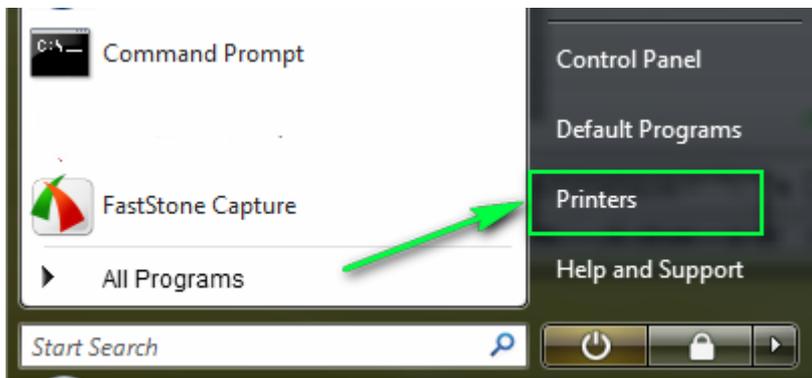

Check that your machine is displayed as new GT Smartstream printer

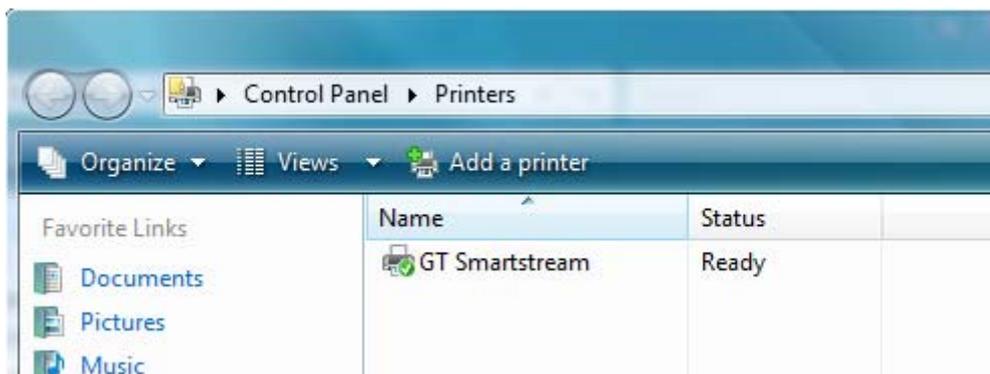

Give this printer the name of your engraving machine :

enize ▾ Views ▾ Add a printer

Links	Name	Status
Documents	 GTS IS400 PnS	Ready

Install an additional engraving rotary machine on USB port :


Case n°1 : the engraving machine is different from machines already installed and firmware of the machine is « plug & Play »

Sirius card : Plug & Play : at least number 1.37


UC K2000 card : Plug & Play : at least number 2.61

Switch on the machine :


→ a tooltip displays « Installing device driver software » :

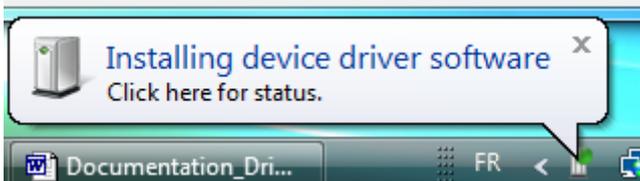


→ a tooltip displays « Your devices are ready to use » :

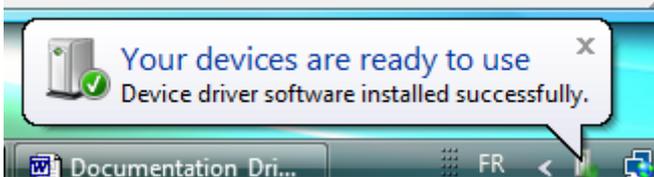


Click on « Printers » in « Start » menu (or in Control panel)

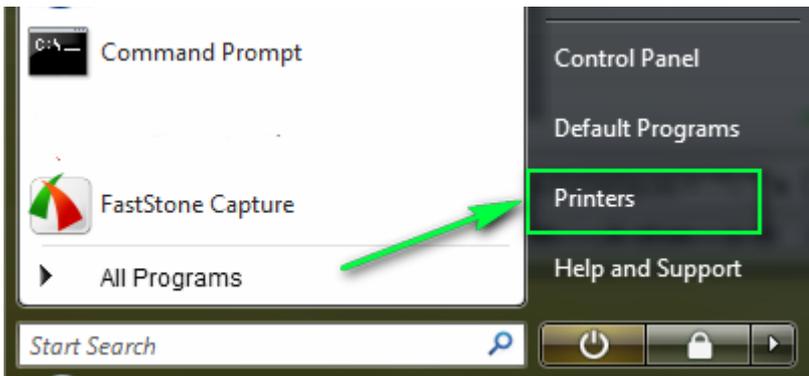

Check that your machine is displayed as new GT Smartstream printer

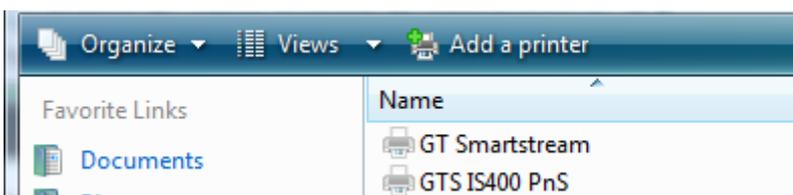

Give this printer the name of your engraving machine :

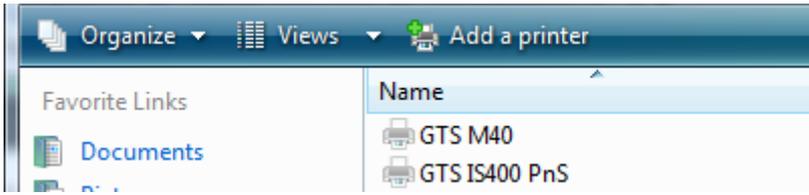

Case n°2 : the engraving machine is different from machines already installed and firmware of the machine is not « plug & Play »


(For information, if nothing happens when we power up the engraving machine, then the version of the firmware is not “plug & play”, so, it is necessary to update the firmware with a “Plug & Play” firmware.

Open the folder with MajFirmware tool :

- If GravoStyle5 Version 4 is already installed, open C:\Gravostyle5400\Firmware\ folder




- If not, Explore the « Gravostyle5 Version 4 » DVD : D:\Firmware folder

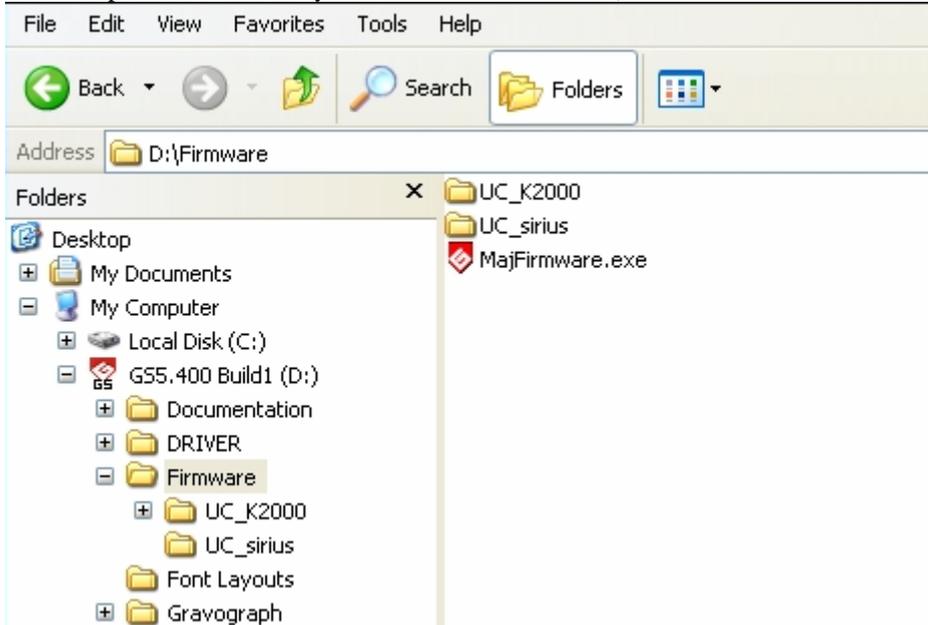


Double-click on MajFirmware.exe :

Wait for the display of the name of the machine and the version of the firmware :


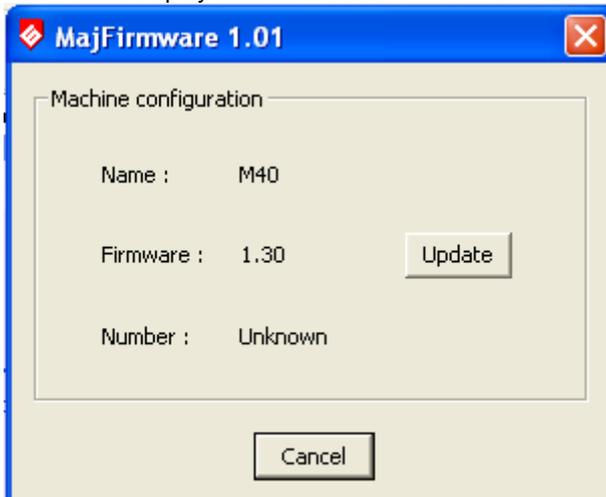


Number = « Unknown » is displayed if the firmware is not Plug & play.

Click on « Update » in front of Firmware :

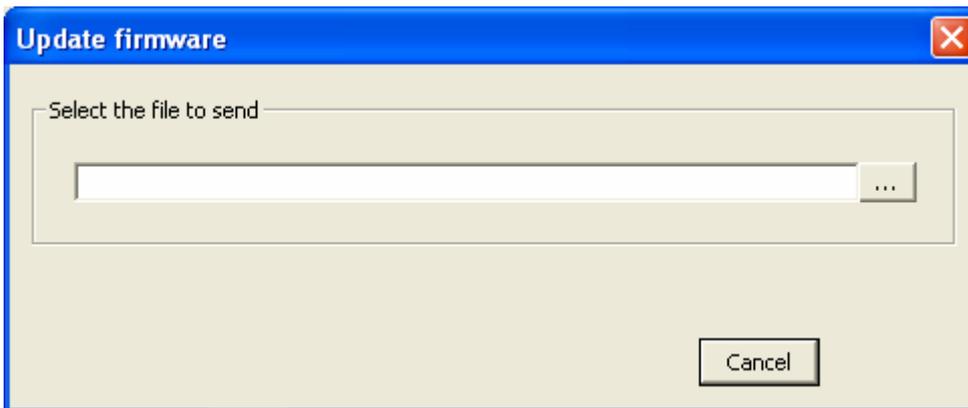


Click on the button  and select a « plug & play » firmware (vp_prog.dos) in UC_Sirius or UC_K2000 folder.
Sirius card : Plug & Play : at least number **1.37**
UC_K2000 card : Plug & Play : at least number **2.61**

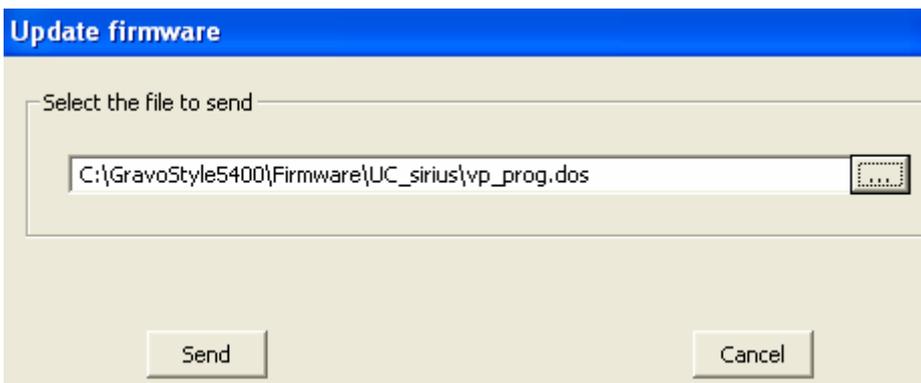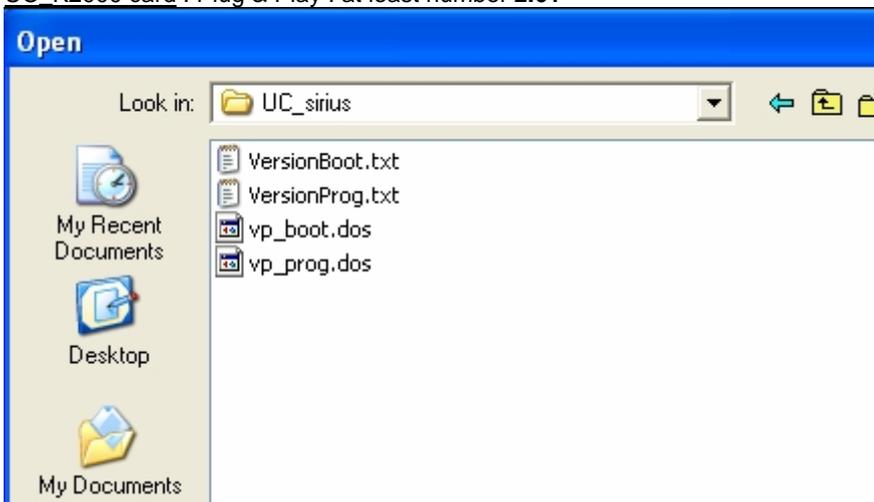


Click on Send :

A scroll bar displays :

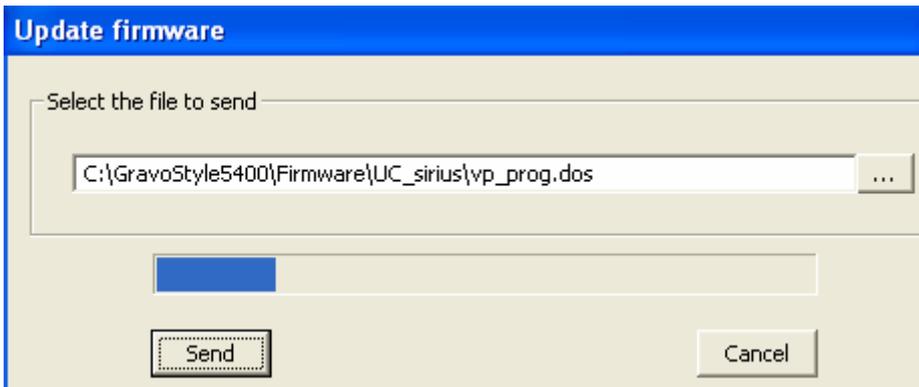

At the end, version of firmware is displayed (1.37 in this example) :

Number = « 0 » → Firmware is « plug & play »
Click on « Cancel » to close MajFirmware tool.

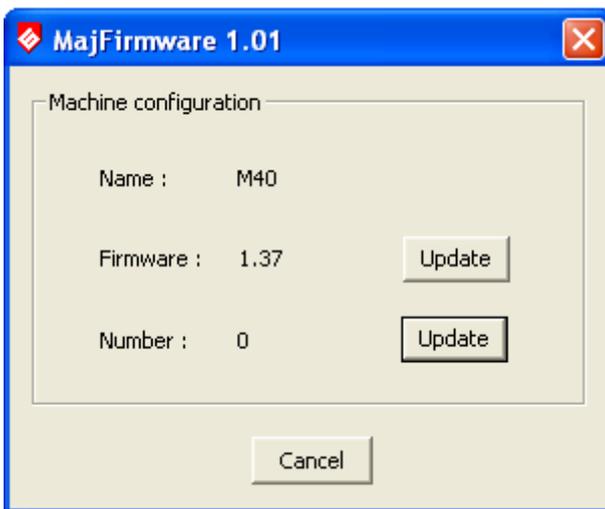

→ Follow the steps of case number 1

Case n°3 : the engraving machine is the same one that a machine already installed


(If firmware of the machine is not "Plug & play", follow steps of case n°2

Open the folder with MajFirmware tool :


- If GravoStyle5 Version 4 is already installed, open C:\Gravostyle5400\Firmware\ folder
- If not, Explore the « GravoStyle5 Version 4 » DVD : D:\Firmware folder

Double-click on MajFirmware.exe :

Wait for the display of the name of the machine and the version of the firmware :

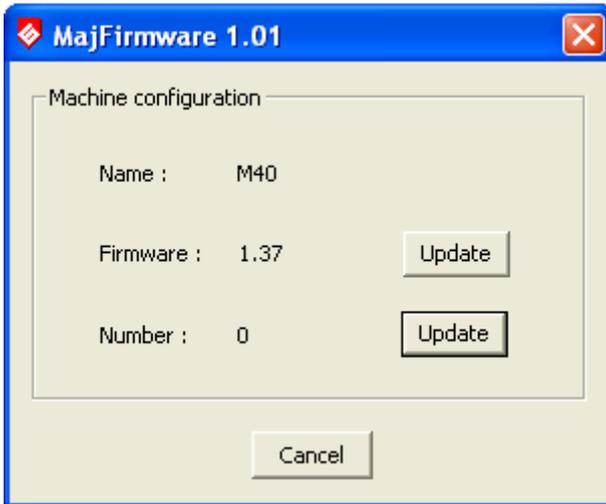

2 identical machines must be differentiated with « Number » parameter
Click on "Update" button in front of « Number »

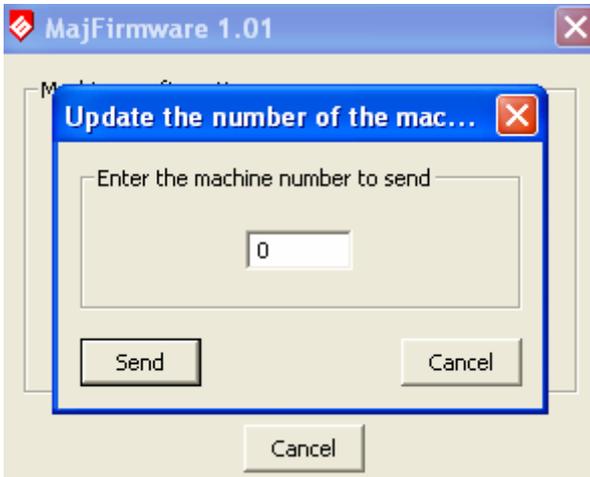


Enter a number different from the machines already installed.

By default, the machine has number 0, So at the installation of a second machine, enter number 1, then number 2...

Click on « Send » :

→ machine bips

→ « Number » = 1 is displayed in MajFirmware

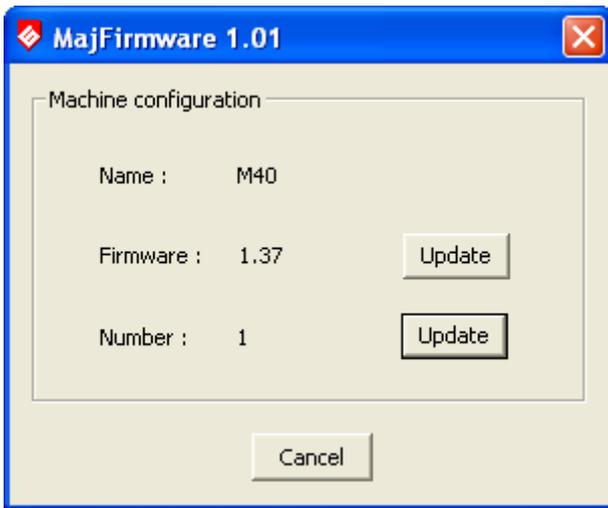


Click on « Cancel » to close MajFirmware tool.

Power off the engraving machine, then power up again.

→ Follow the steps of case number 1

Ensure to differentiate the name of printer of the 2 identical machines (M40 and M40 n°2 for example)

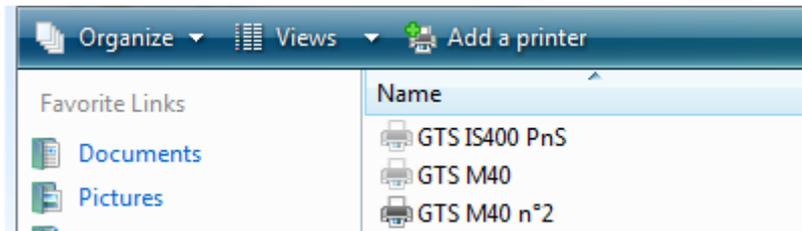

Install a rotary machine on an other port : COM

Select « Other »



Click on « Next »

If GTSmartstream drivers were installed, then they were deleted:

A message notified that driver is not windows certified.




Click on « Install this driver software anyway »





Follow the step of the installation :

With selection of the port :

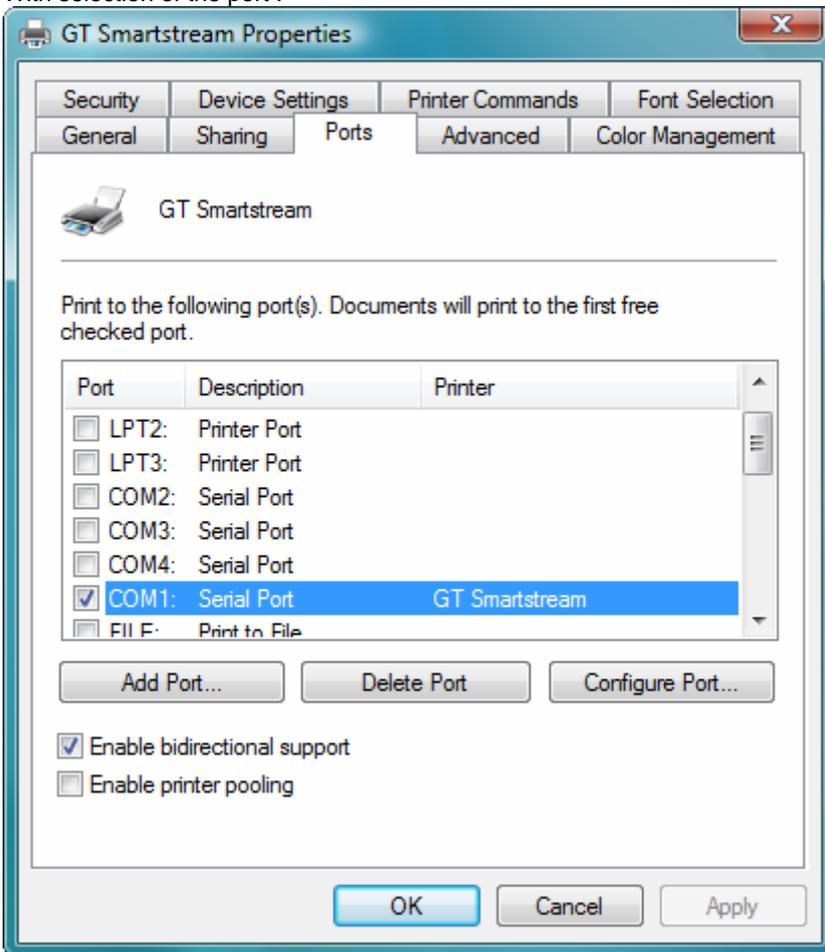

Give this printer the name of the engraving machine :

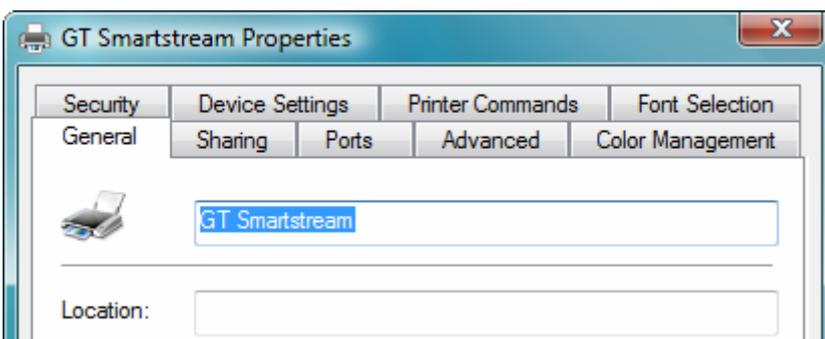

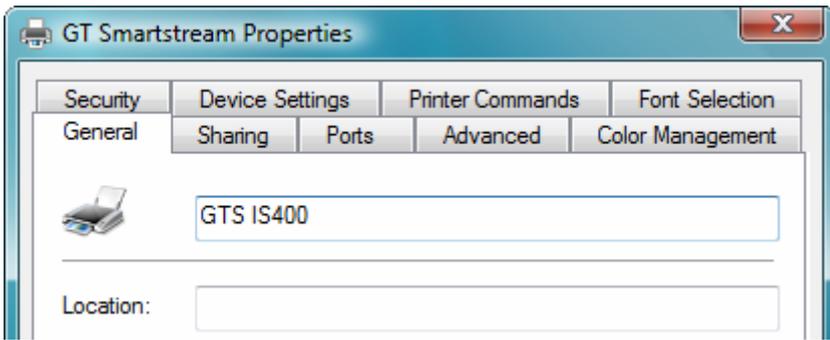


Drive a rotary machine with GravoStyle 5

Start GravoStyle5 Version 4


Click on « Engrave » tab / « Config. Machines »




Select your engraving machine

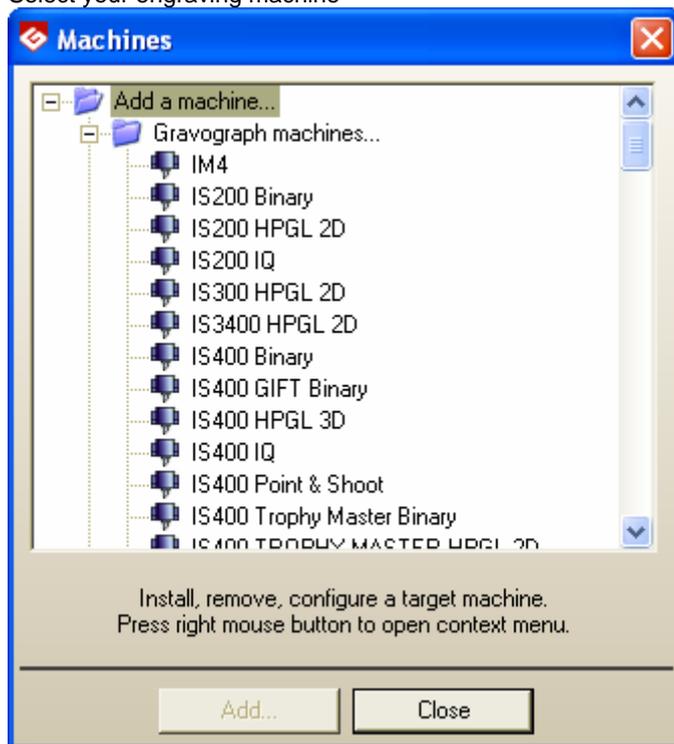

Click on « Add »

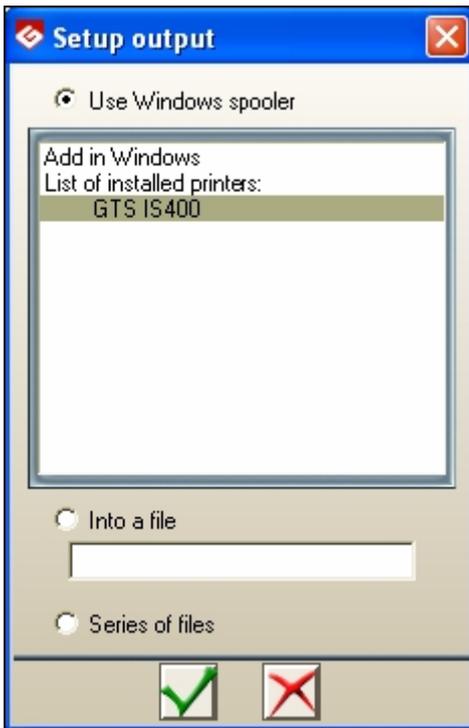

Select printer with the name of your engraving machine
Click on « valid » button

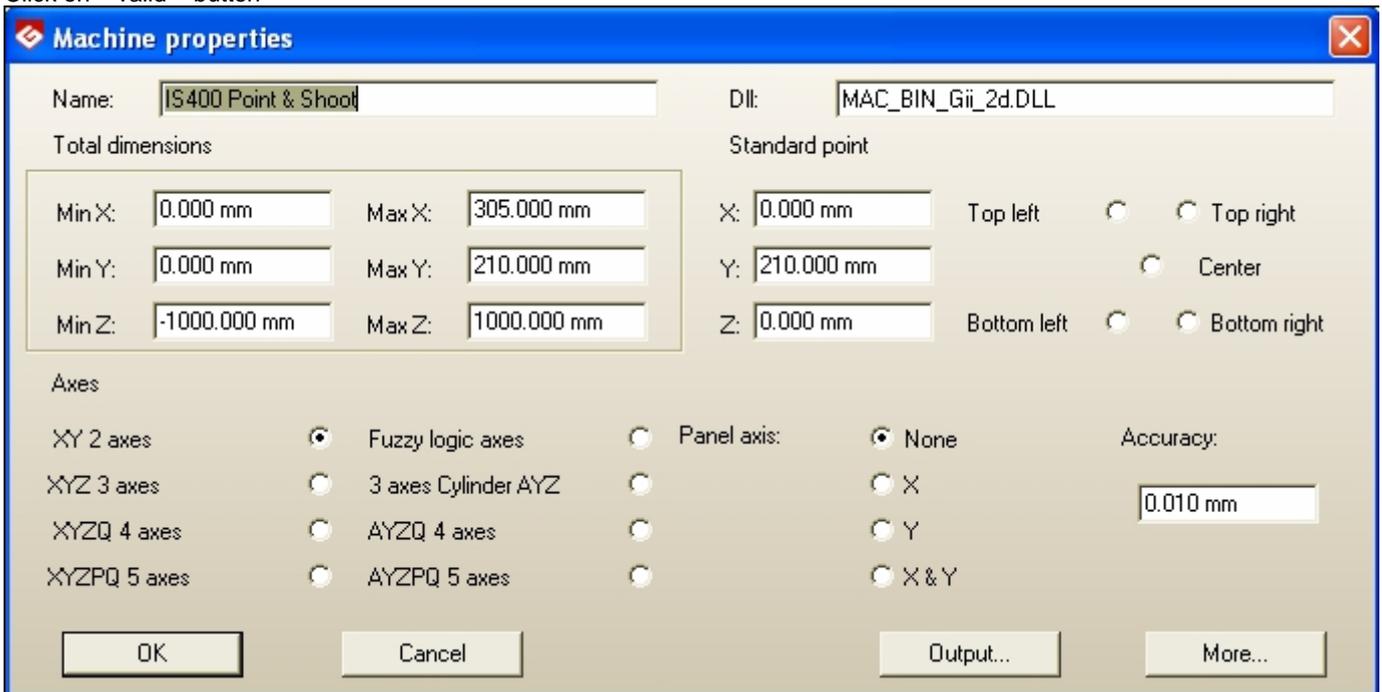

Install Lsolution 5.xx driver Plug & Play :


Power off the machine. Unplug from your PC.

Power up PC. Let Windows operating system start.


Run a session as Administrator. A standard user has no right to make a setup in Windows

Open the folder with Lsolution 5.00-3 driver


- If GravoStyle5 Version 4 is already installed, open C:\Gravostyle5400\DRIVER\ folder

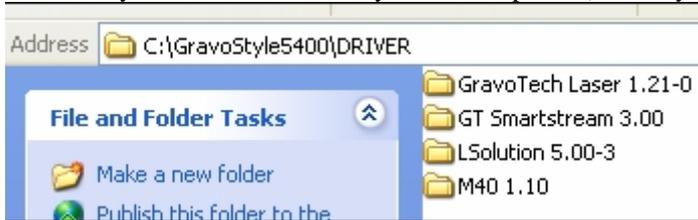

- If not, Explore the « GravoStyle5 Version 4 » DVD : D:\Gravograph\added\DRIVER folder

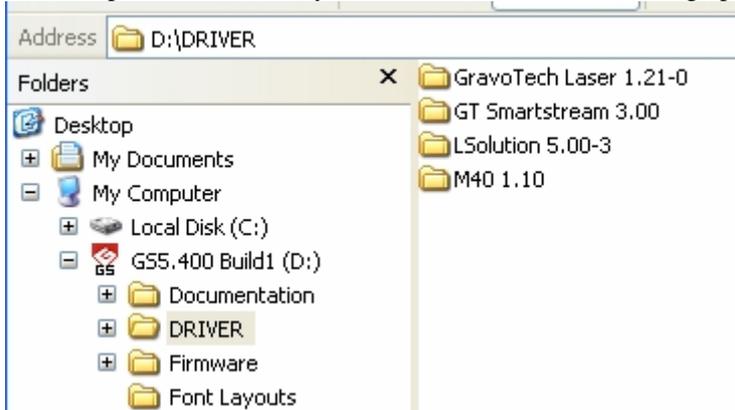

Double-click on setup.exe :

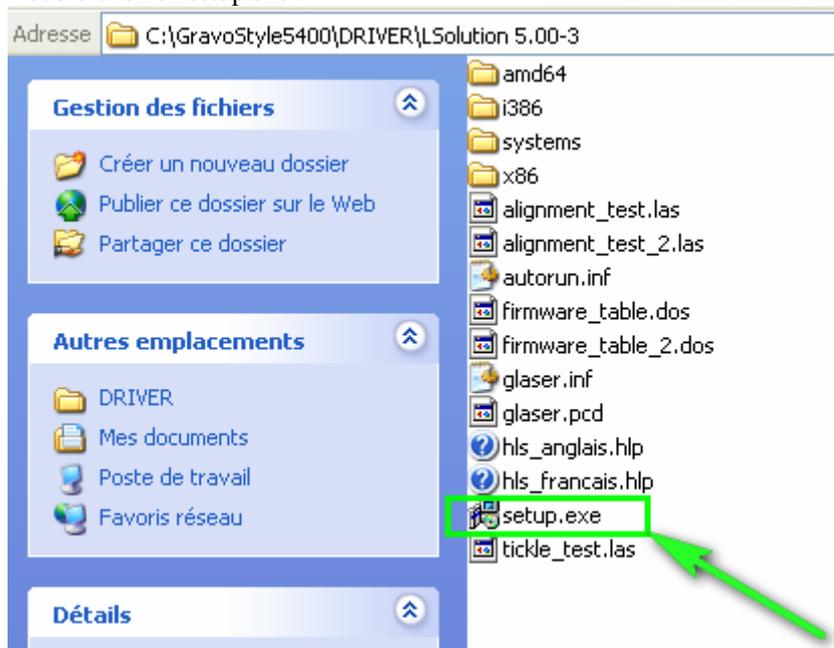


Select the port used for the connection between the PC and the machine :



Install a laser machine on USB port

Select USB
Click on « Next »


If the machine was switch on, a message ask to switch off it.
If LSolution drivers were installed, then they were deleted:

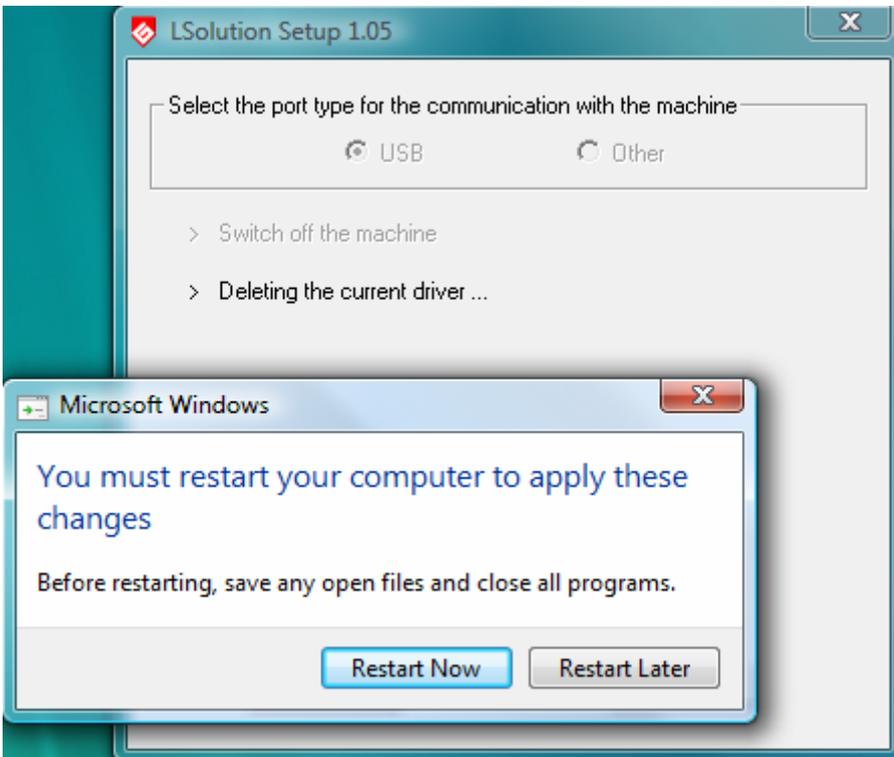

After the restart :

- > Deleting the current driver ...
- > Initializing installation ...

A message notified that driver is not windows certified.

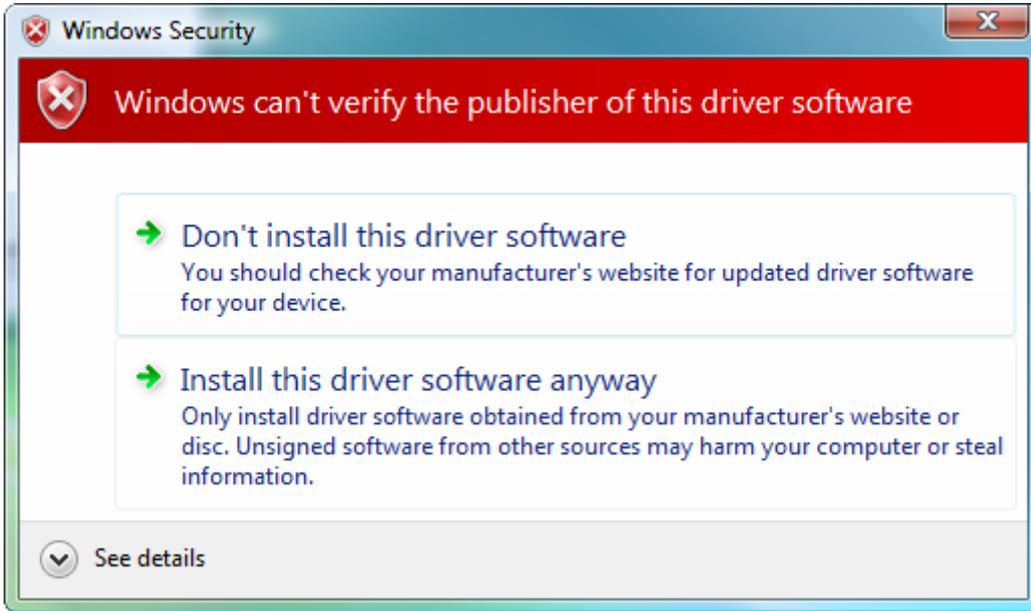

Click on « Install this driver software anyway »

- > Initializing installation ...
- > Connect the machine to the port, switch it on

Connect the machine to the port and switch it on :
→ if the firmware of the machine is not Plug & play, then there is a firmware update :

- > Connect the machine to the port, switch it on
- > Firmware update ...

A message displays to switch off the machine :


- > Firmware update ...
- > Switch off the machine

Switch off the machine :
→ A message displays to switch on the machine :


- > Switch off the machine
 - > Switch on the machine
-

Switch on the machine :


→ a tooltip displays « Installing device driver software » :

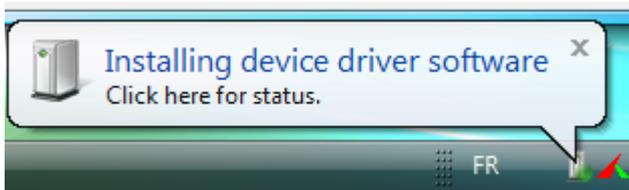


→ a tooltip displays :

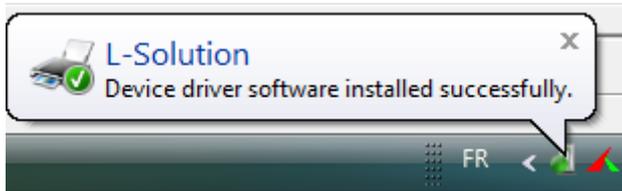


Click on « Printers » in « Start » menu (or in Control panel)

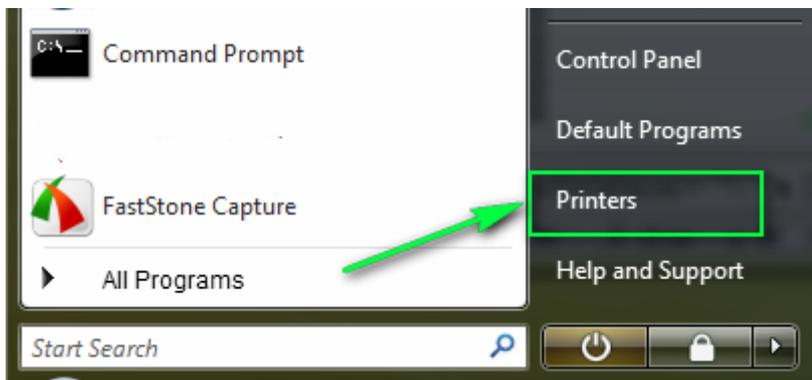

List of printers displays :

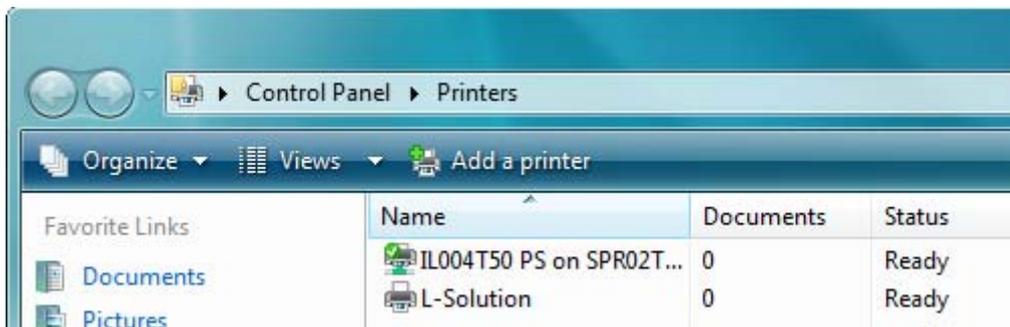

Give this printer L-Solution the name of your laser machine :

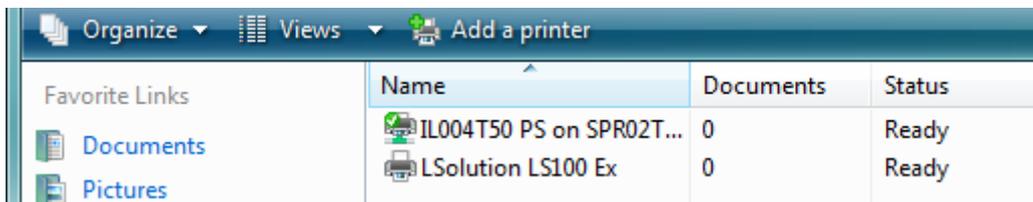


Install an additional engraving laser machine on USB port :


Case n°1 : **the laser machine is different from machines already installed and firmware of the machine is « plug & Play »**
UC K2000 card : Plug & Play : at least number **2.61**

Switch on the machine :


→ a tooltip displays « Installing device driver software » :

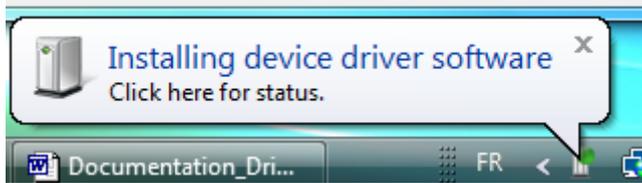


→ a tooltip displays « Your devices are ready to use » :

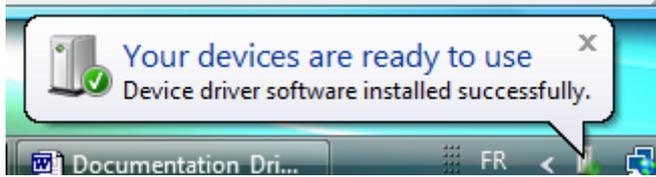


Click on « Printers » in « Start » menu (or in Control panel)

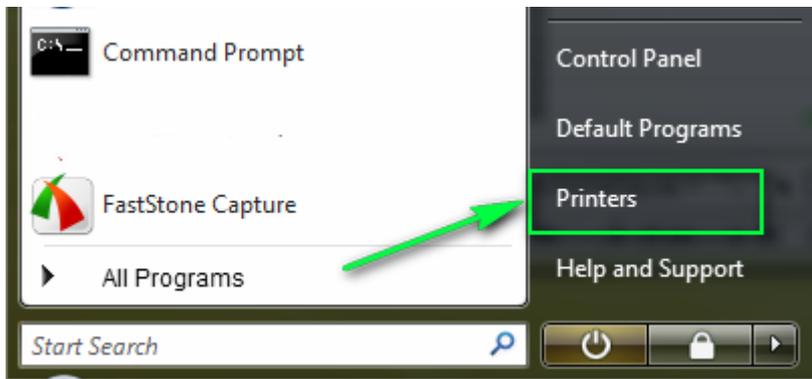

List of printers displays :

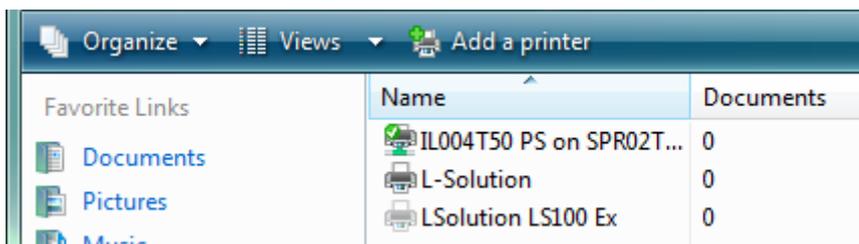

Give this L-Solution printer the name of your laser machine :

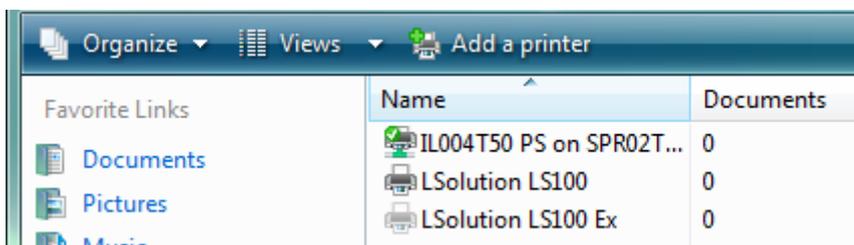

Case n°2 : **the engraving laser machine is different from machines already installed and firmware of the machine is not « plug & Play »**


(For information, if nothing happens when we power up the engraving machine, then the version of the firmware is not “plug & play”, so, it is necessary to update the firmware with a “Plug & Play” firmware.

Open the folder with MajFirmware tool :

- If GravoStyle5 Version 4 is already installed, open C:\Gravostyle5400\Firmware\ folder




- If not, Explore the « Gravostyle5 Version 4 » DVD : D:\Firmware folder

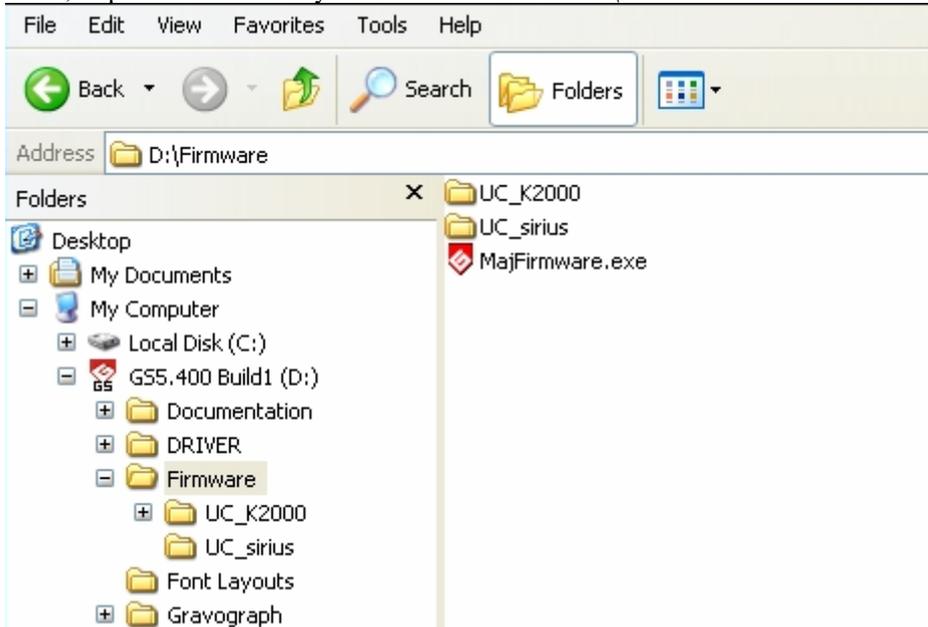


Double-click on MajFirmware.exe :

Wait for the display of the name of the machine and the version of the firmware :

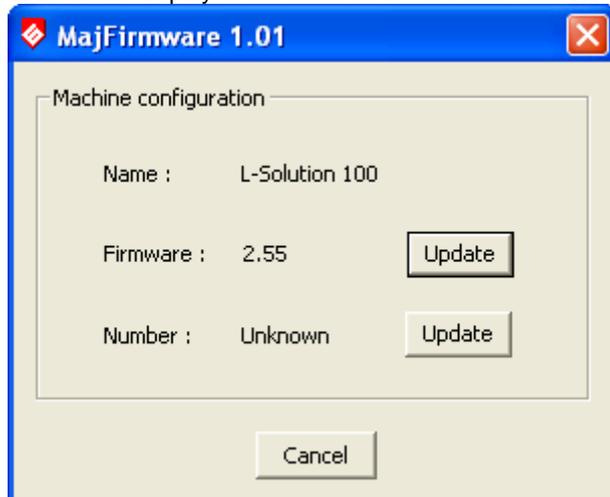


Number = « Unknown » is displayed if the firmware is not Plug & play.

Click on « Update » in front of Firmware :

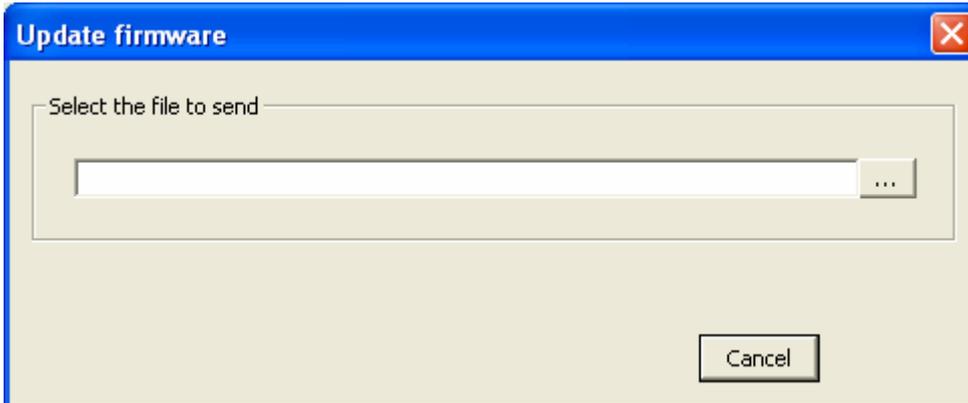


Click on the button  and select a « plug & play » firmware (vp_prog.dos) in UC_K2000 folder.
UC_K2000 card : Plug & Play : at least number **2.61**

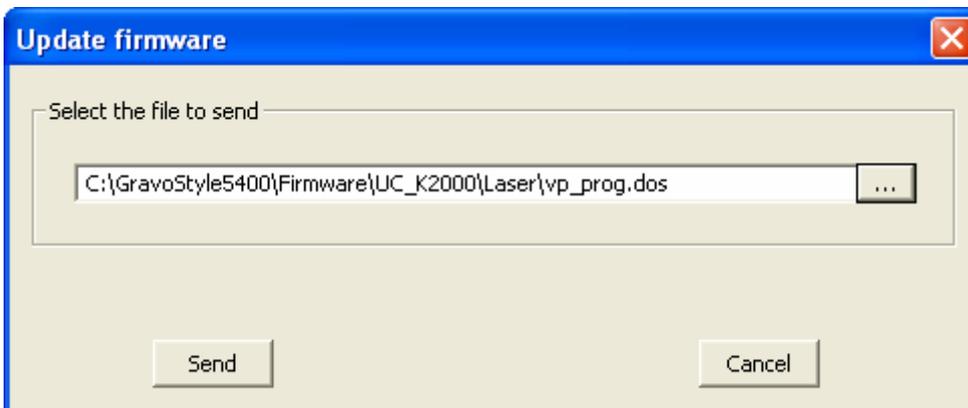


Click on Send :

A scroll bar displays :

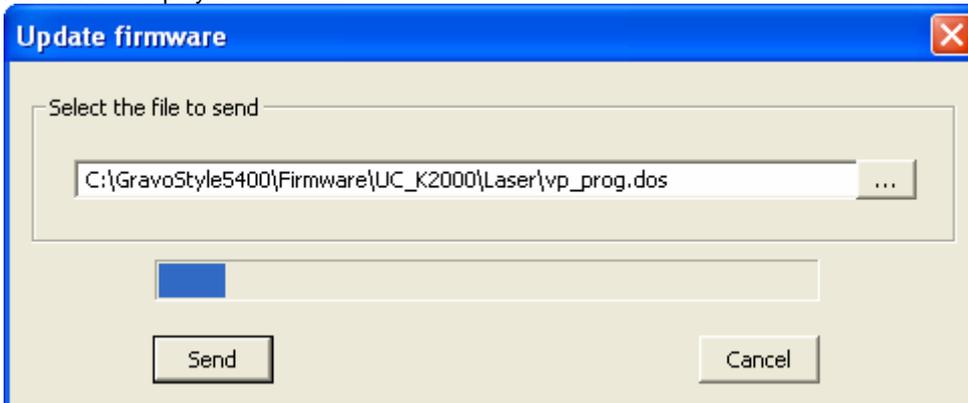

At the end, version of firmware is displayed (2.61 in this example) :

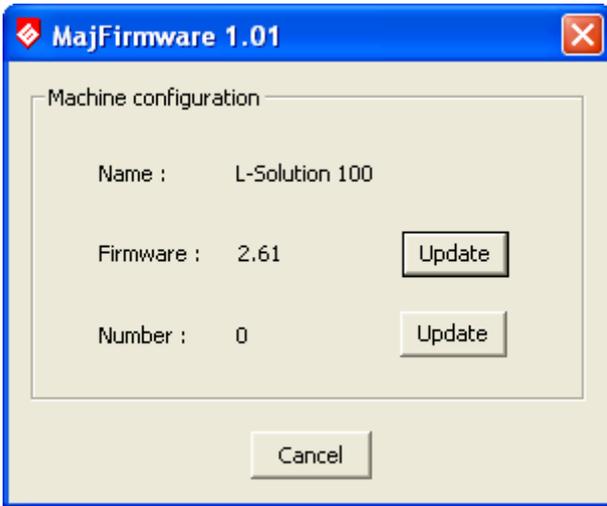

Number = « 0 » → Firmware is « plug & play »
Click on « Cancel » to close MajFirmware tool.

→ Follow the steps of case number 1

Case n°3 : the engraving machine is the same one that a machine already installed


(If firmware of the machine is not “Plug & play”, follow steps of case n°2

Open the folder with MajFirmware tool :


- If GravoStyle5 Version 4 is already installed, open C:\Gravostyle5400\Firmware\ folder
- If not, Explore the « Gravostyle5 Version 4 » DVD : D:\Firmware folder

Double-click on MajFirmware.exe :

Wait for the display of the name of the machine and the version of the firmware :

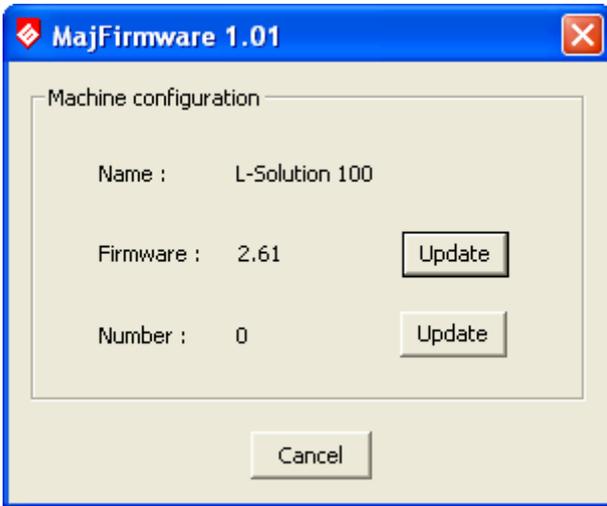


2 identical machines must be differentiated with « Number » parameter
Click on “Update” button in front of « Number »

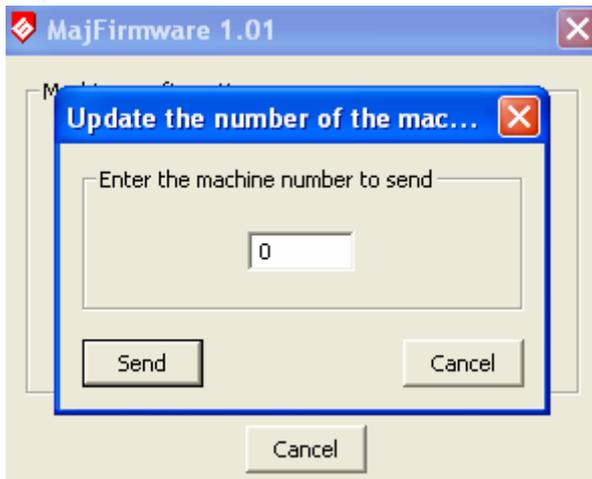

Enter a number different from the machines already installed.
 By default, the machine has number 0, So at the installation of a second machine, enter number 1, then number 2...


Click on « Send » :
 → machine bips
 → « Number » = 1 is displayed in MajFirmware

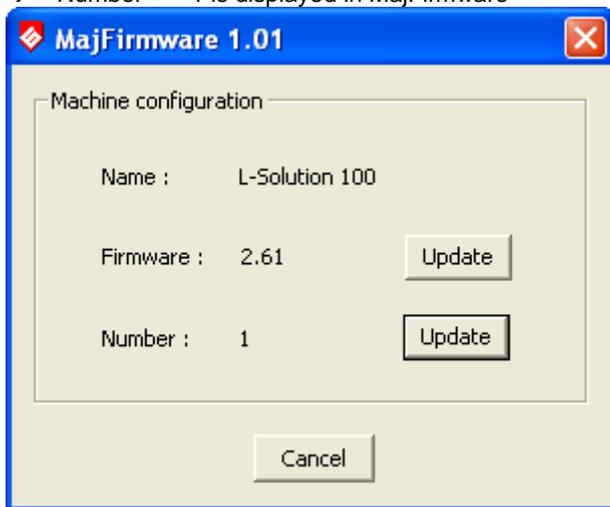

Click on « Cancel » to close MajFirmware tool.


Power off the engraving machine, then power up again.

→ Follow the steps of case number 1
 Ensure to differentiate the name of printer of the 2 identical machines (LSolution LS100 and LSolution LS100 n°2 for example)

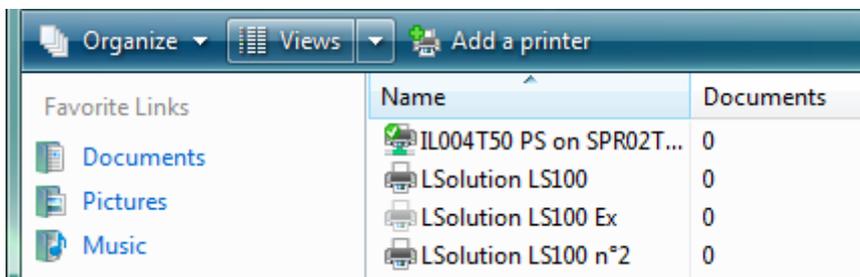


Install a laser machine on an other port : LPT (parallel)

Select « Other »

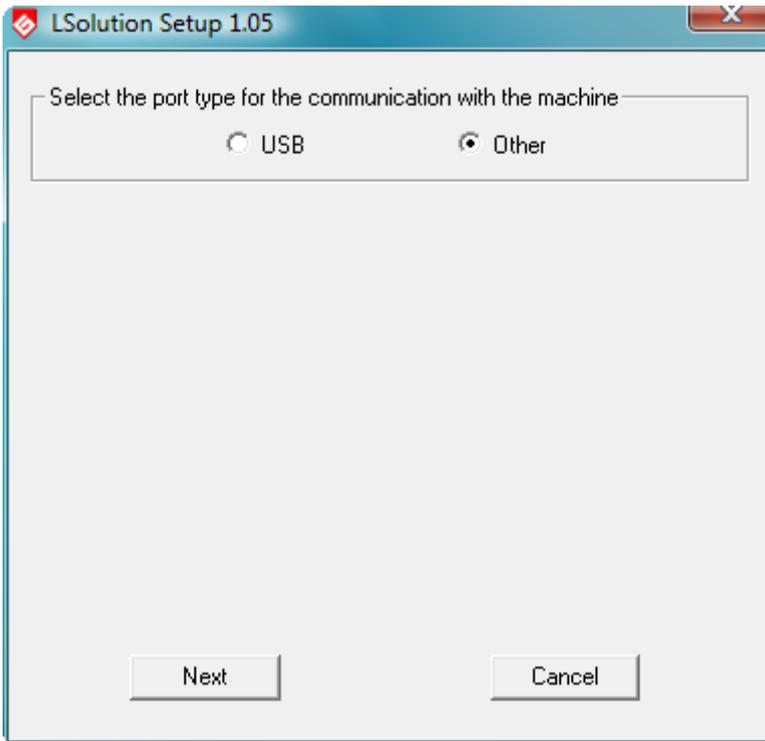


Click on « Next »


If LSolution drivers were installed, then they were deleted:

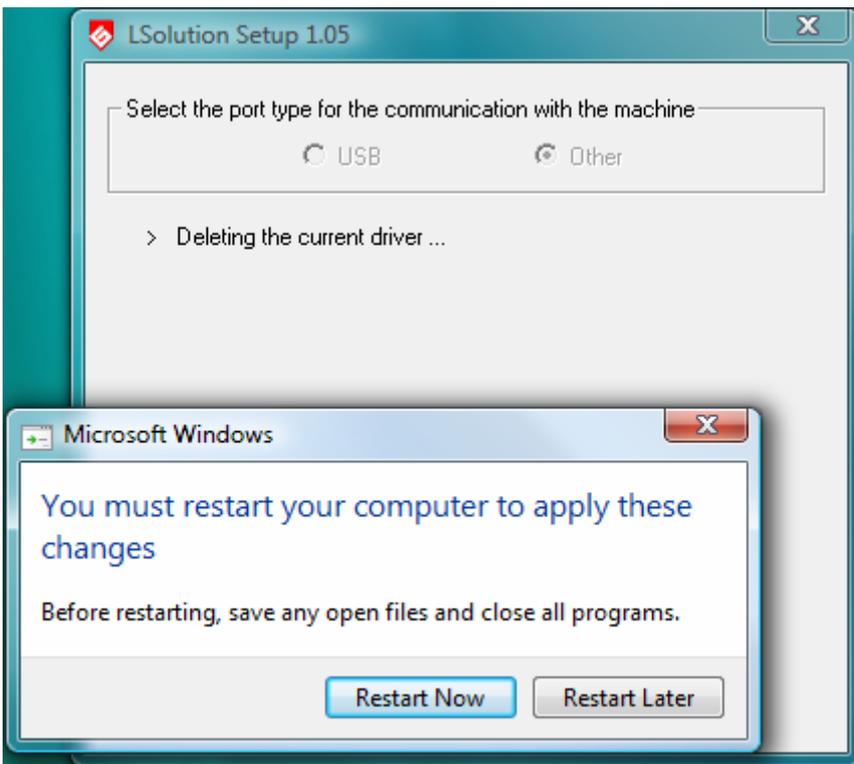


After the restart :

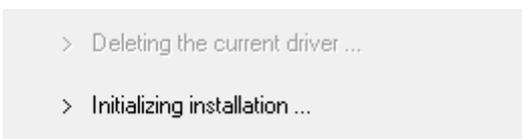

A message notified that driver is not windows certified.

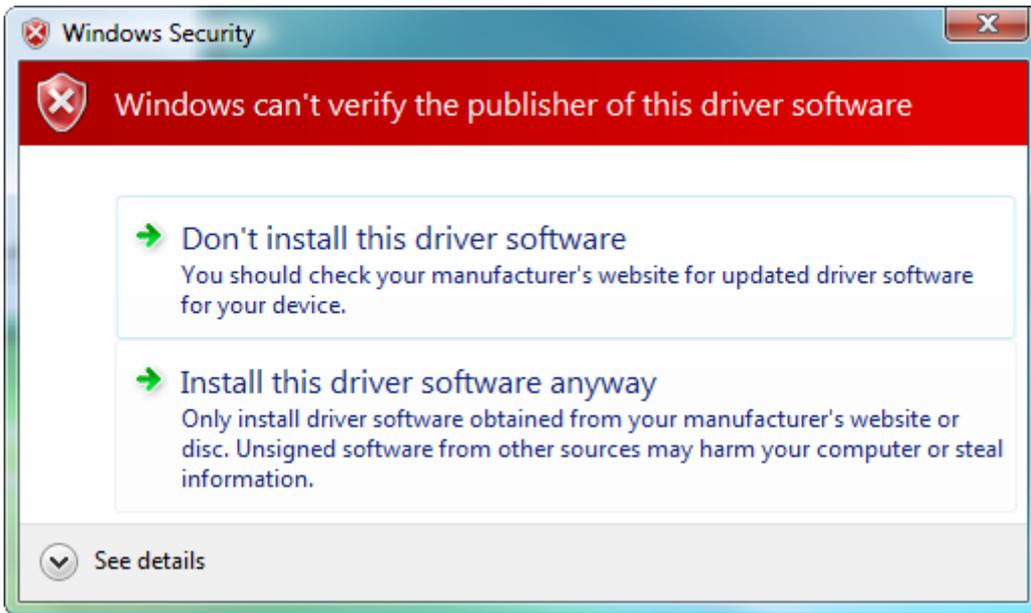


Click on « Install this driver software anyway »

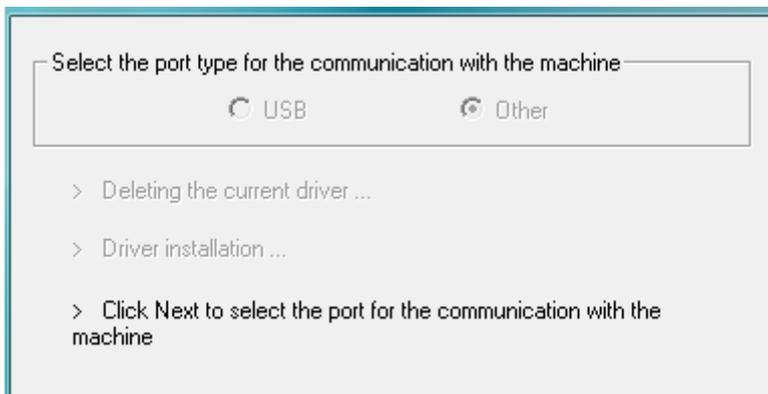


Follow the step of the installation :

Give this printer the name of the engraving machine :

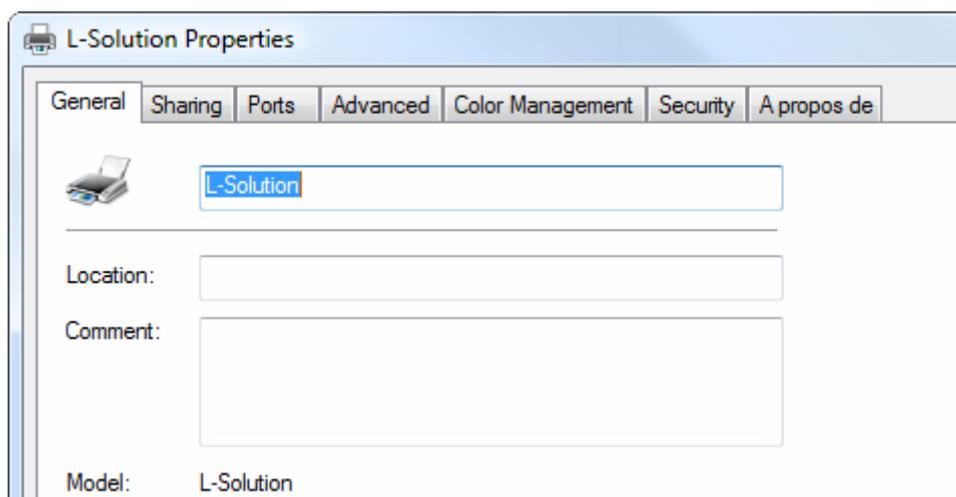


Selection of the port :

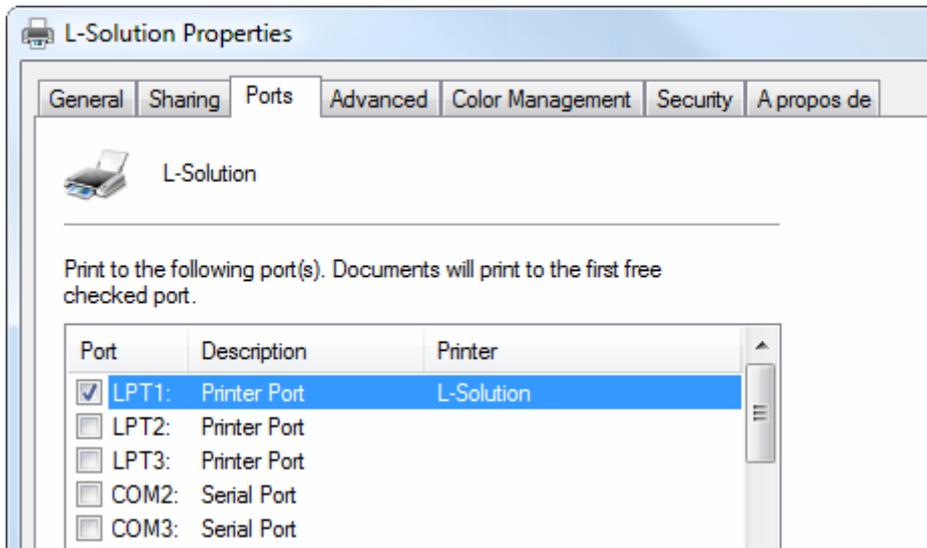


Drive a bidirectional laser machine with GravoStyle 5 (LS100 / LS100 Ex)

It is necessary to install GT Smartstream driver for the communication between the laser machine and the PC


Click on « Printers » in « Start » menu (or in Control panel)

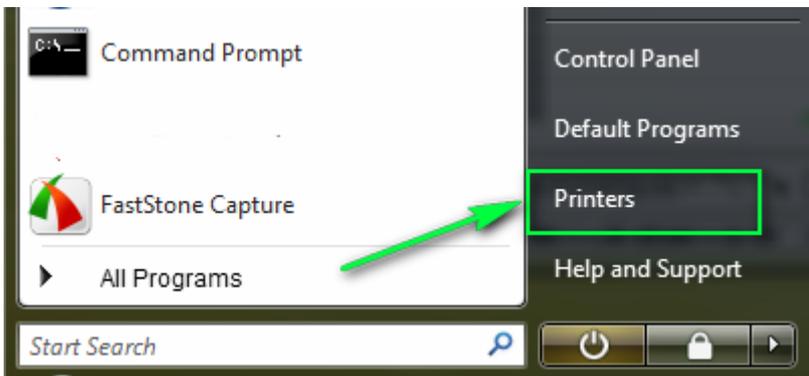

Right click on LSolution printer : Properties :

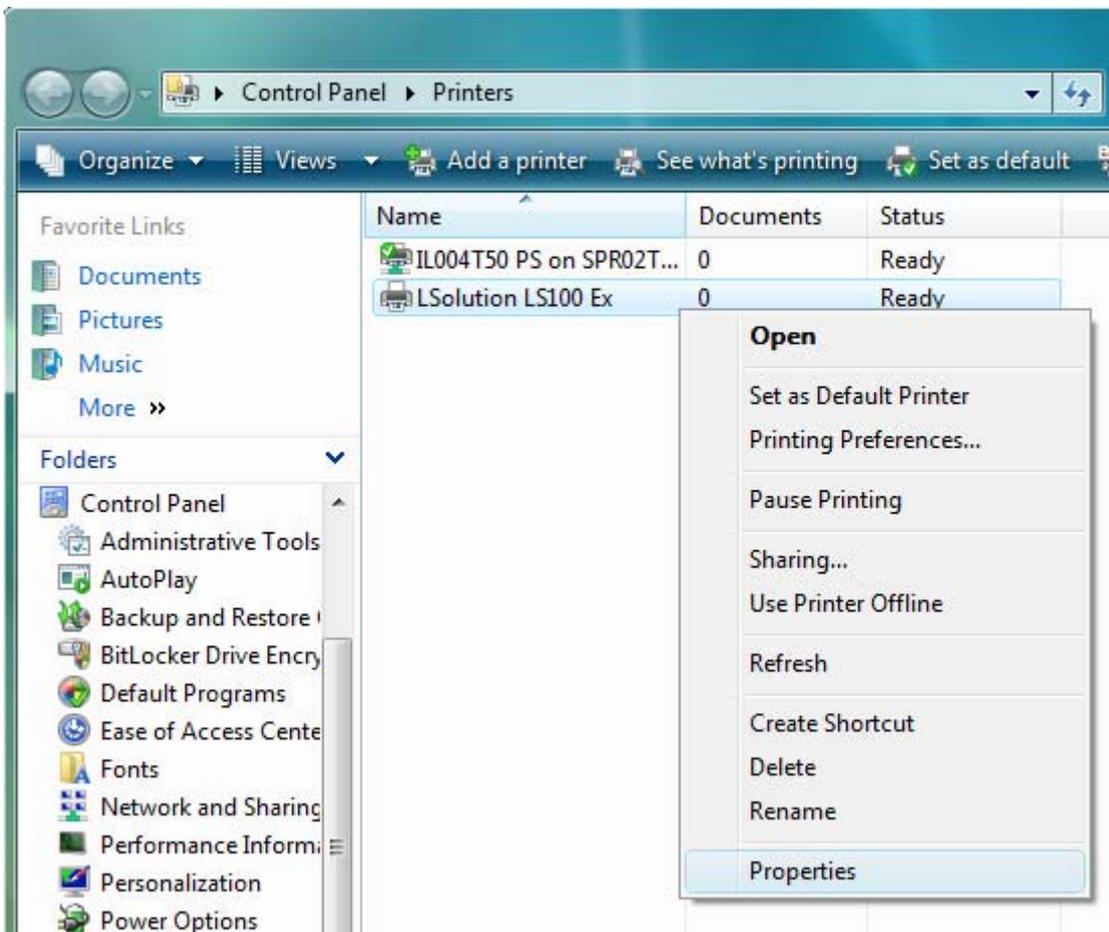


Remember the number of the USB port (USB001 in this example) :

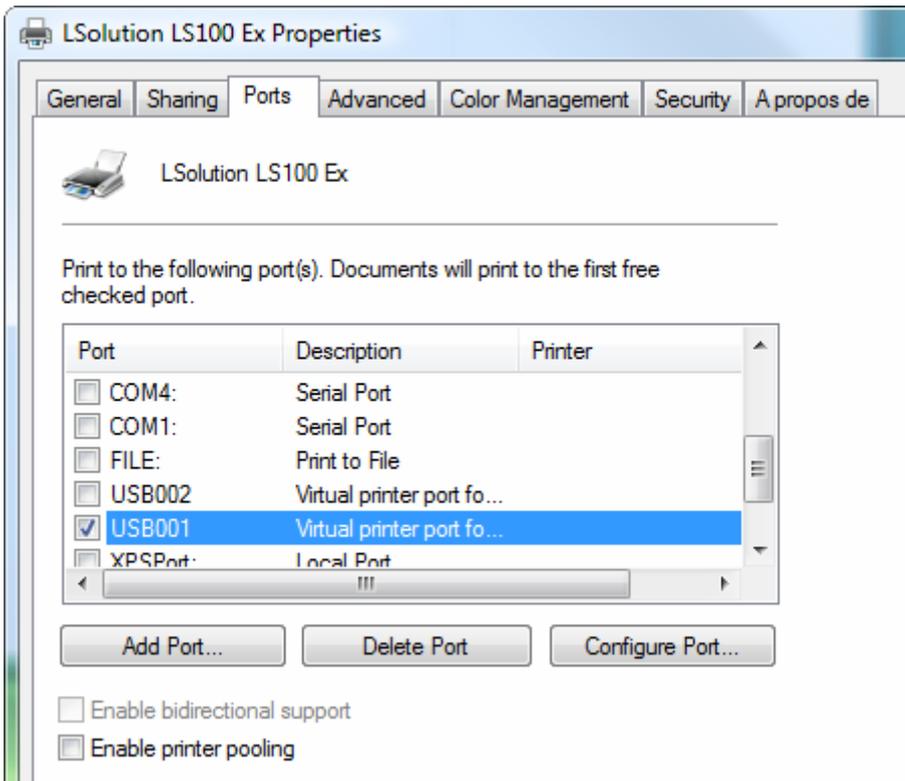


Click on « Cancel » to close the properties of LSolution


In Printers, click on « Add a printer » :

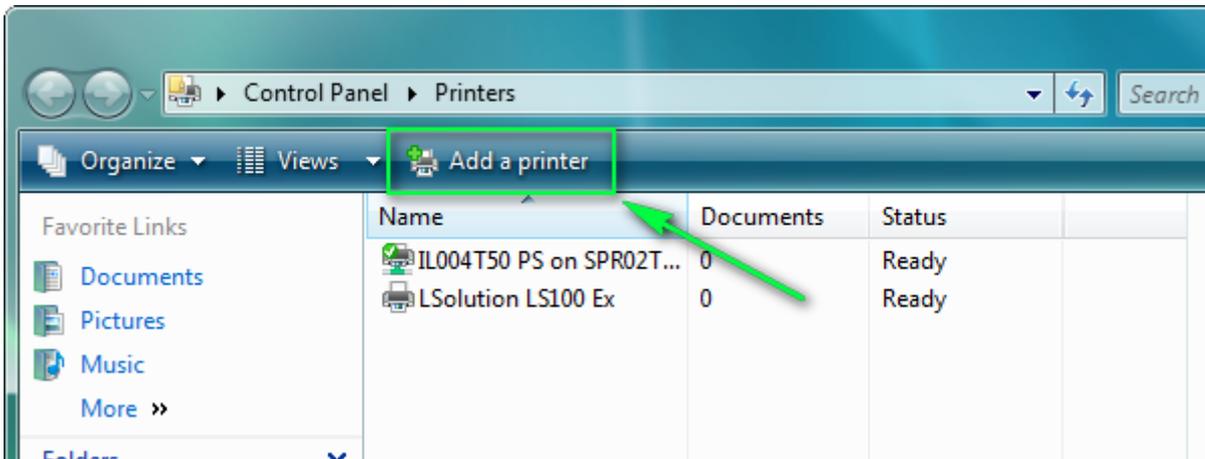


Add Printer Wizard is lunched :

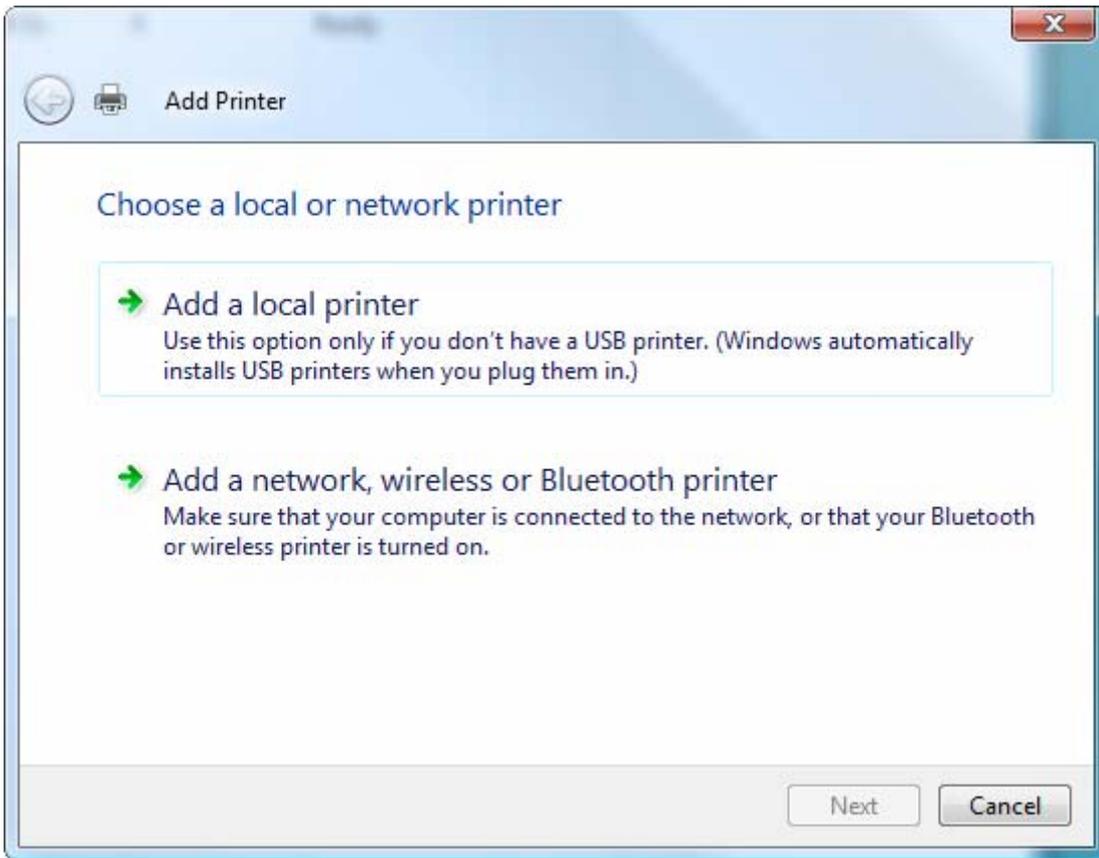


Select "Add a local printer"

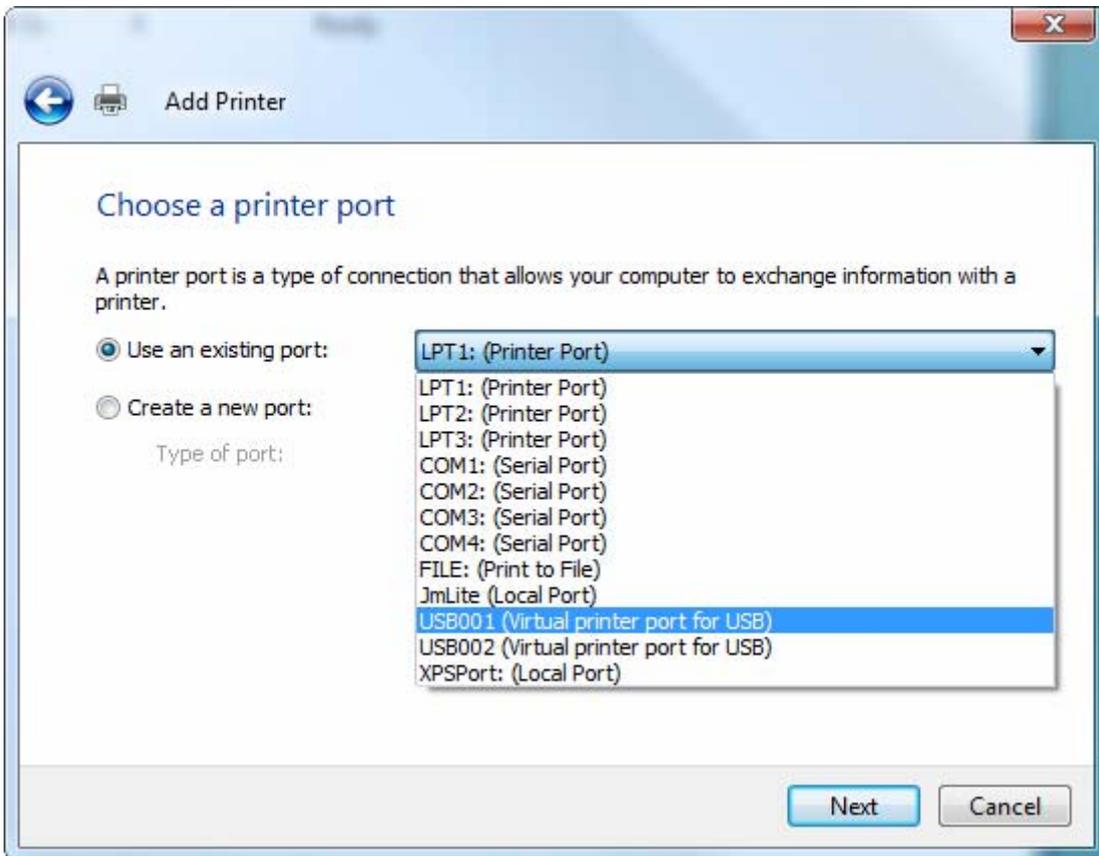


Select the number of the USB port
Click on "Next"

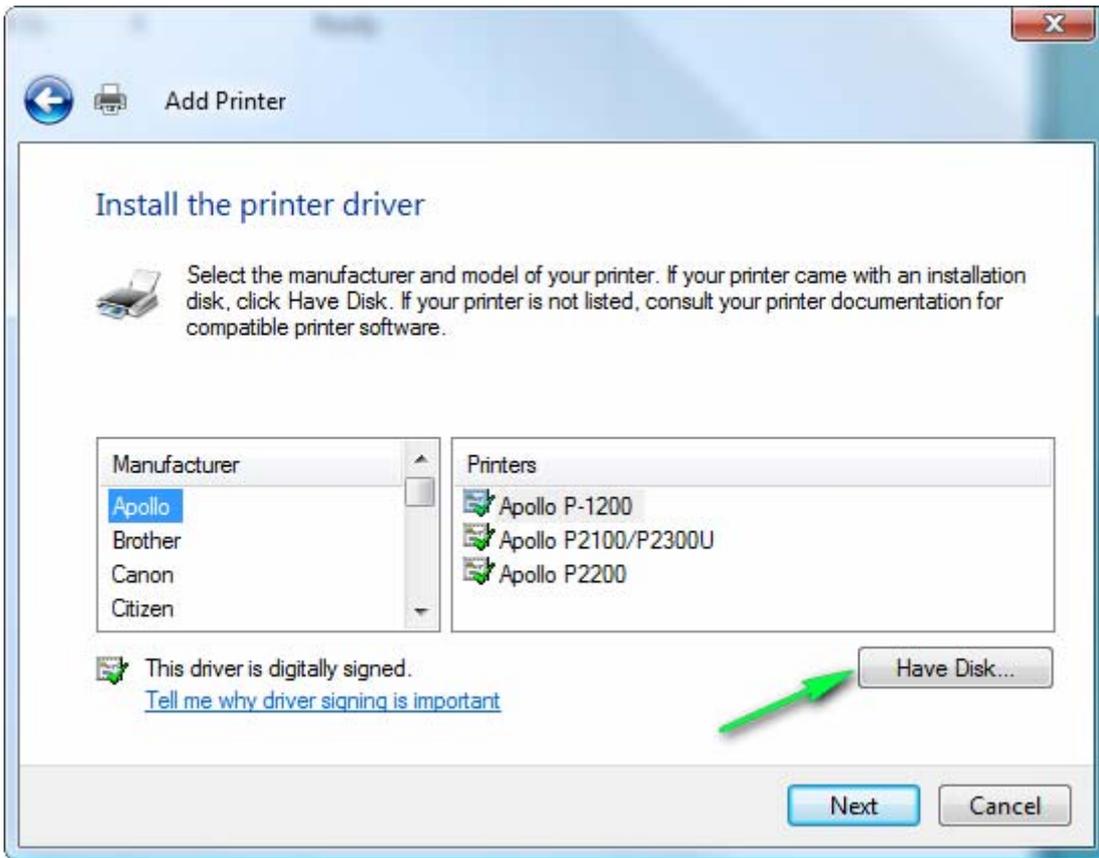


Select « Have Disk... »

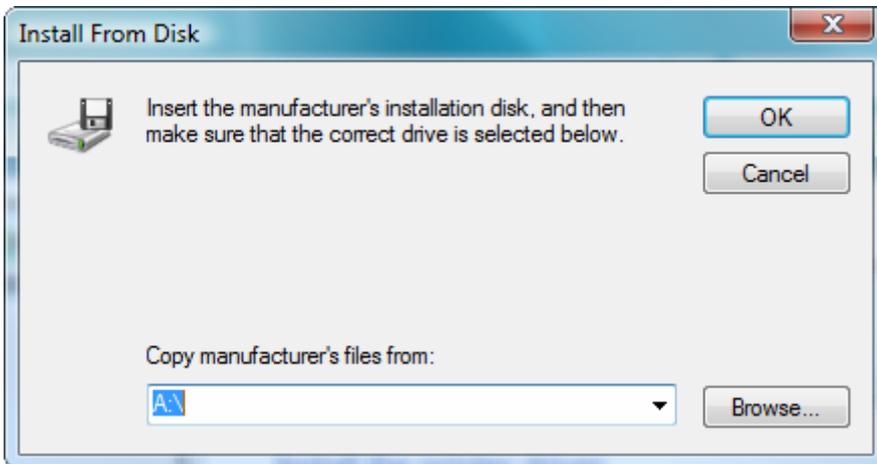


Click on « Browse »

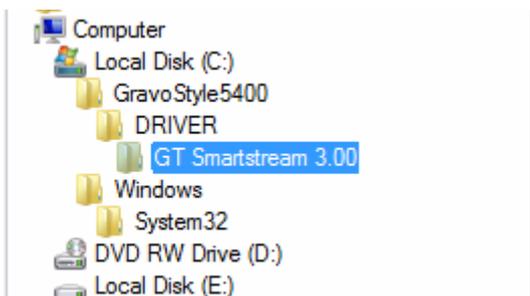


Locate file in : C:\GravoStyle5400\DRIVER\GT Smartstream 3.00 folder

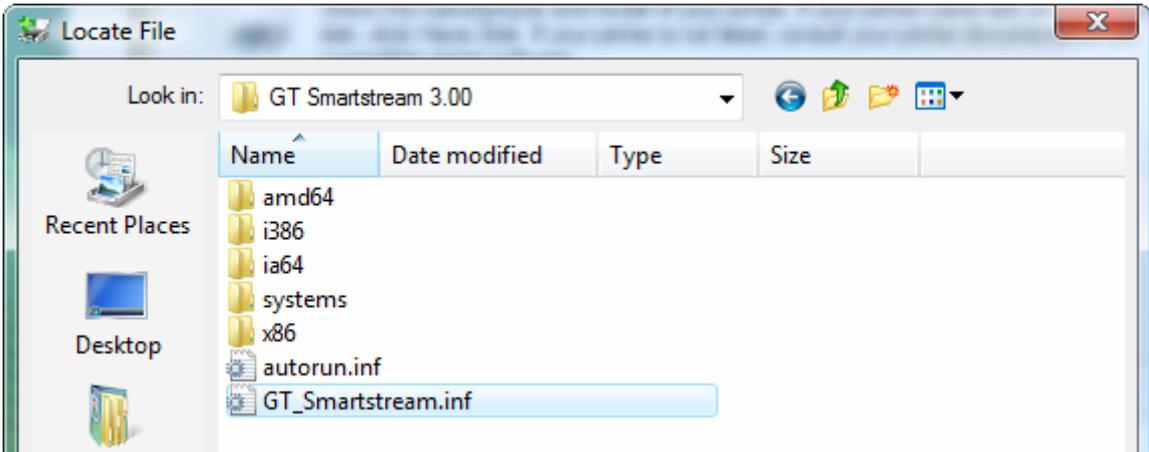


Select GT_Smartstream.inf
Click on "Open"

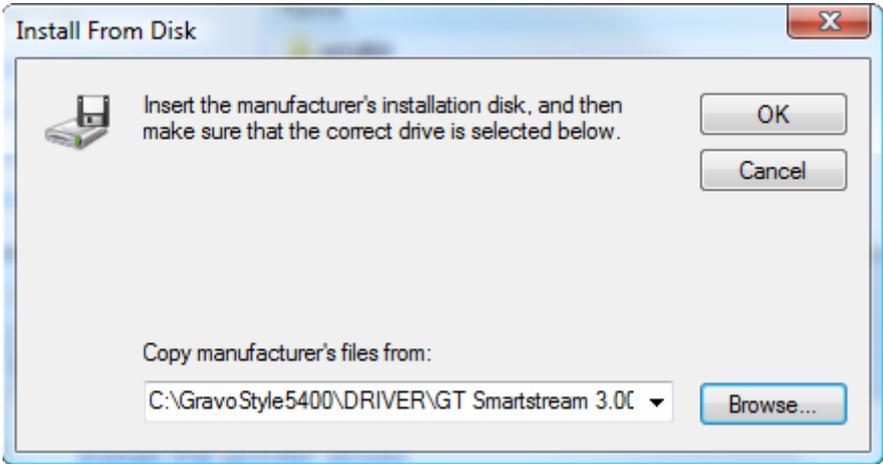

Click on « OK »

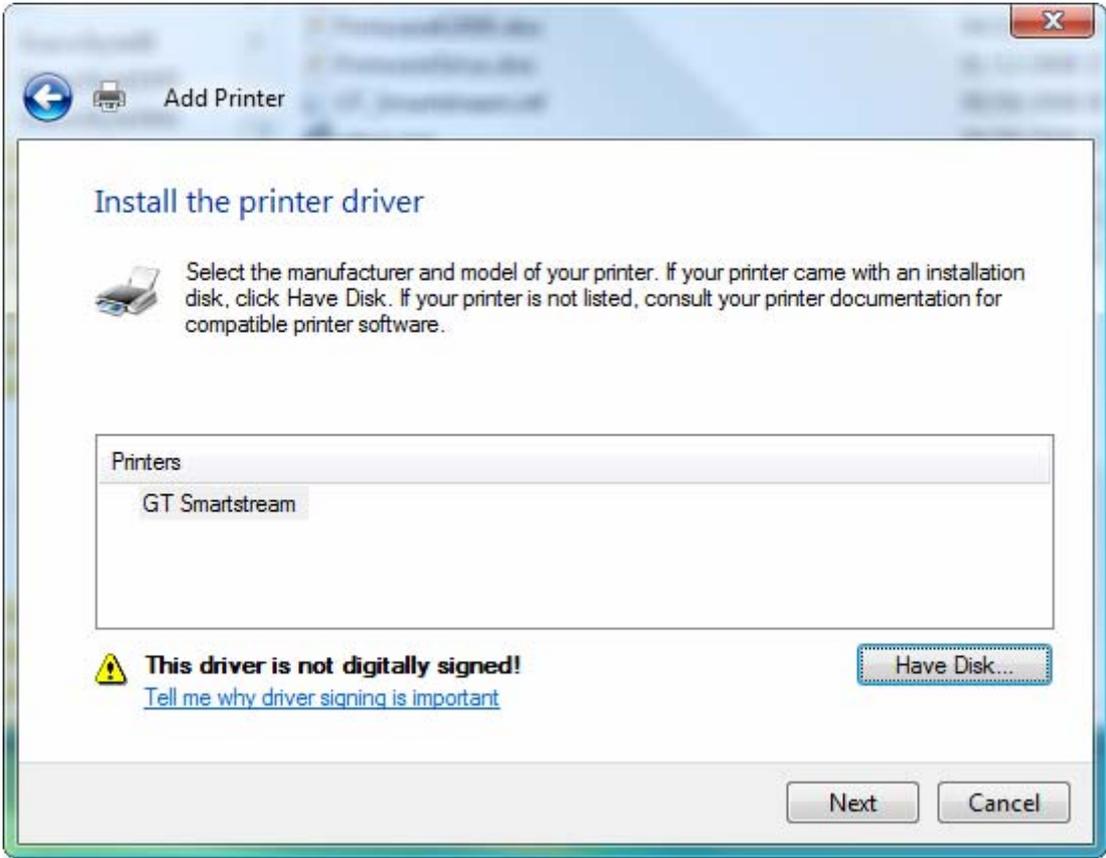


Click on « Next »

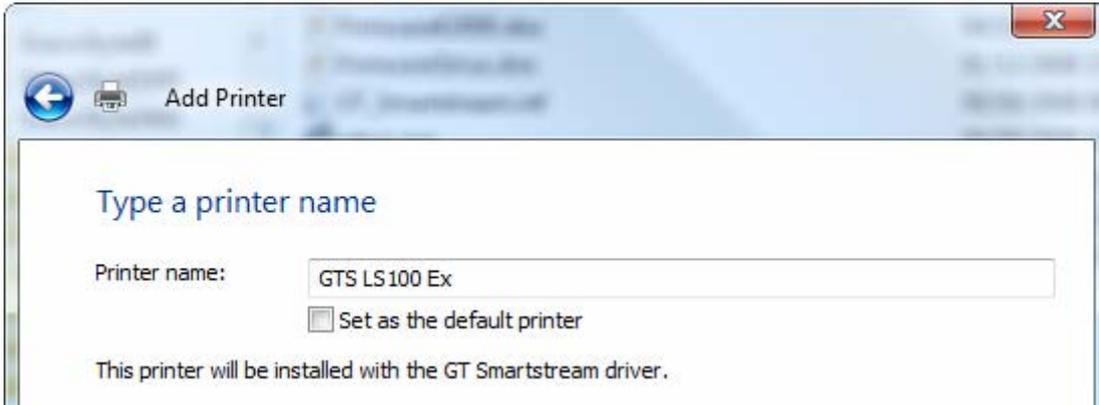

Give this printer the name of the laser machine (with GTS for GT Smartstream for example in order to make the difference with Lsolution driver)
Printer by default : select no.....

- Do not share this printer
- Share this printer so that others on your network can find and use it

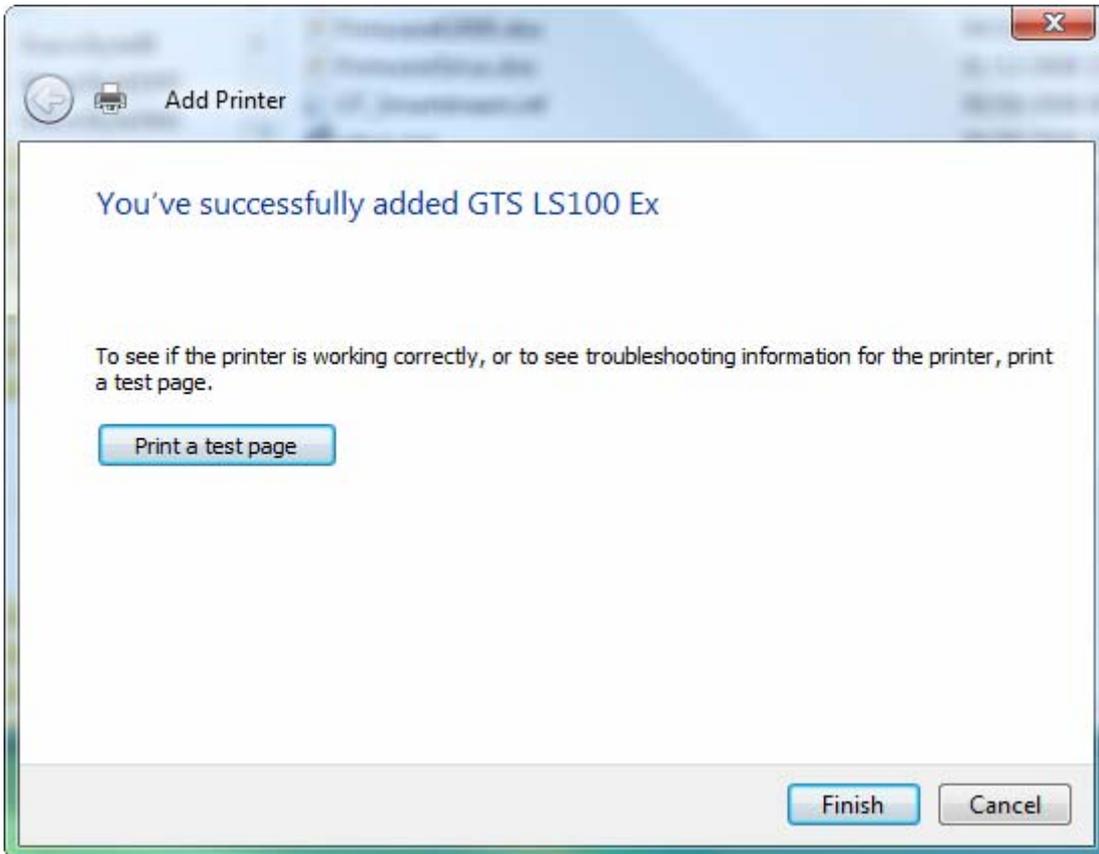

Click Finish


In GravoStyle5 :

Start GravoStyle5 Version 4


Click on « Engrave » tab / « Config. Machines »



Select your engraving machine

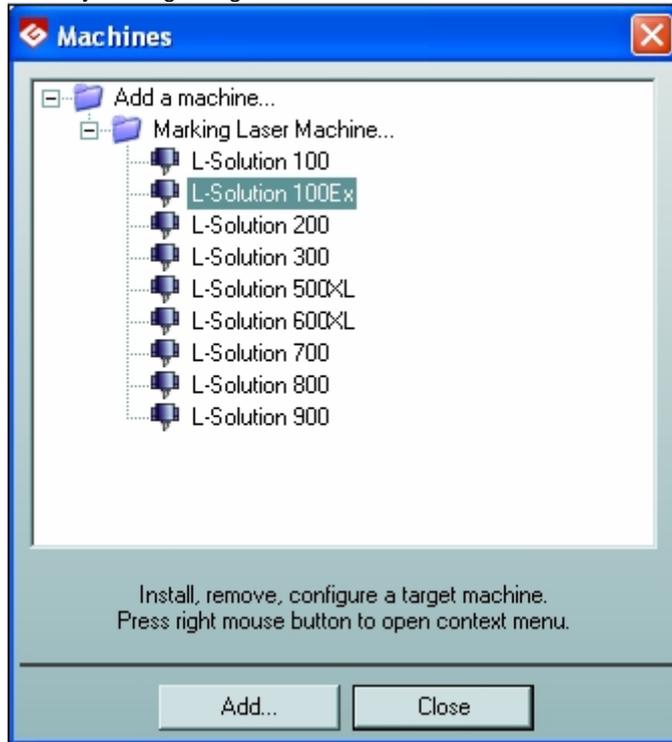


Click on « Add »

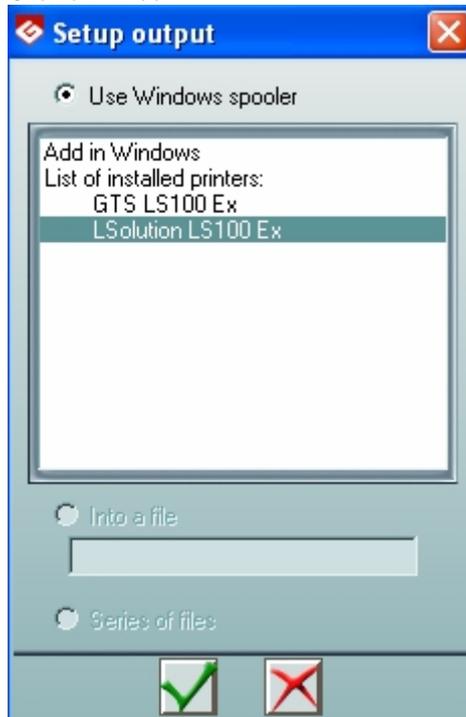

Select Lsolution printer with the name of your engraving machine
Click on « valid » button




Select the USB card
Click on "Valid"

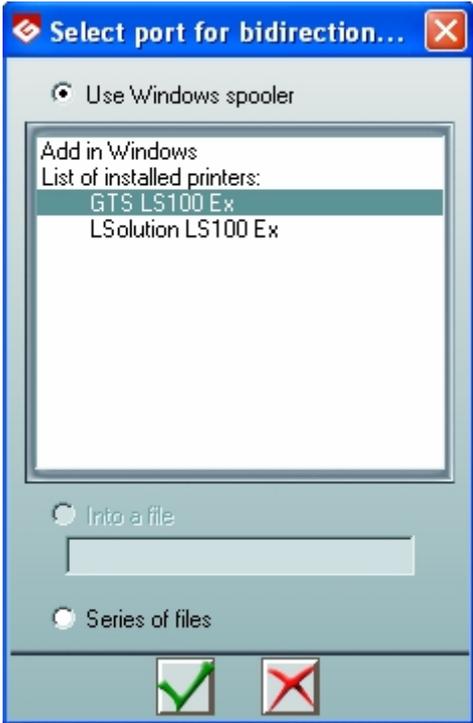

Select GT Smartstream printer with the name of your engraving machine
Click on « valid » button




Click on « OK »

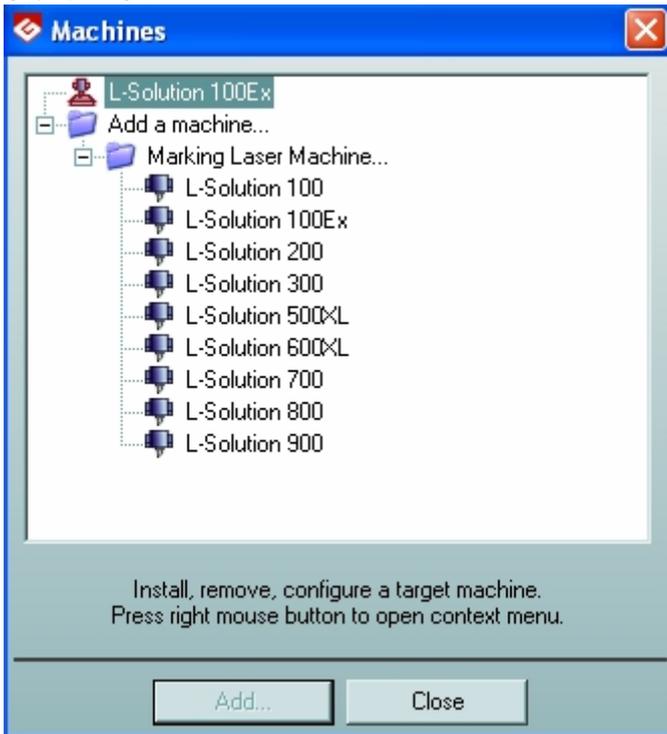


Drive a no-bidirectional laser machine with GravoStyle 5 (LS800 / LS900)

Start GravoStyle5 Version 4


Click on « Engrave » tab / « Config. Machines »

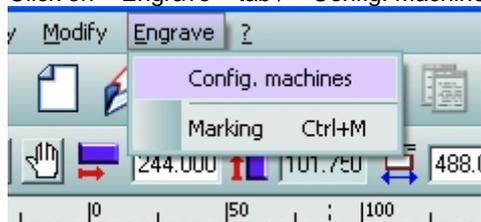

Select your engraving machine

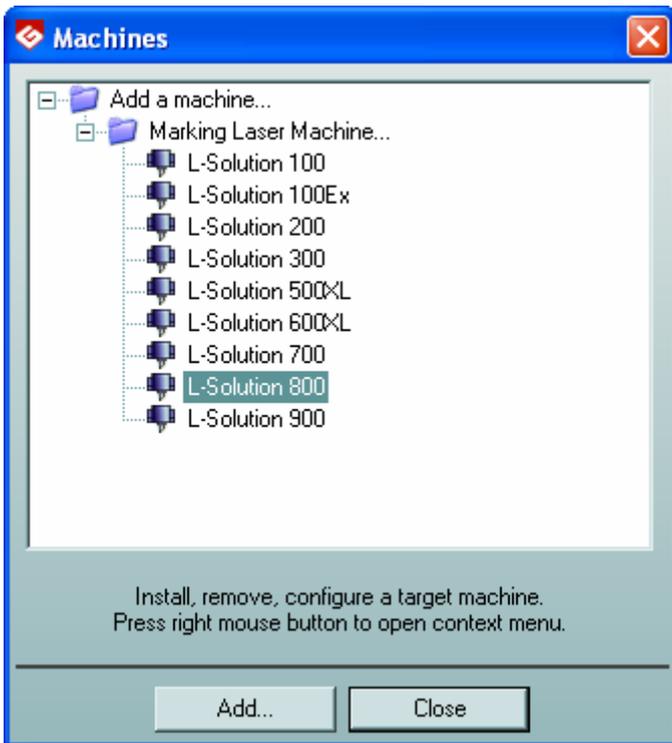


Click on « Add »

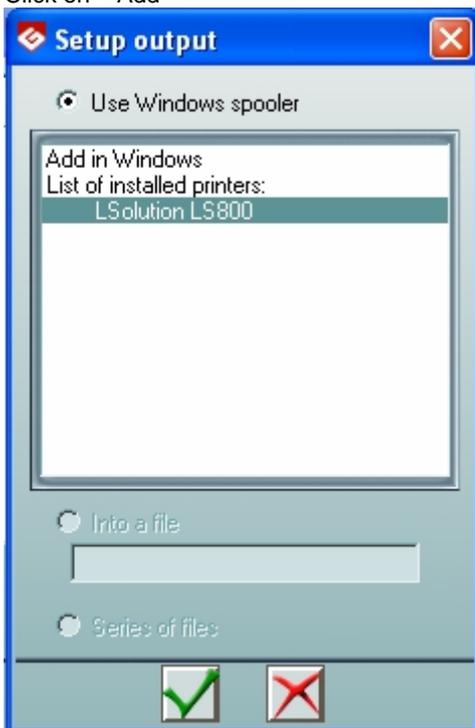

Select Lsolution printer with the name of your engraving machine
Click on "Valid"



Select the card
Click on "Valid"

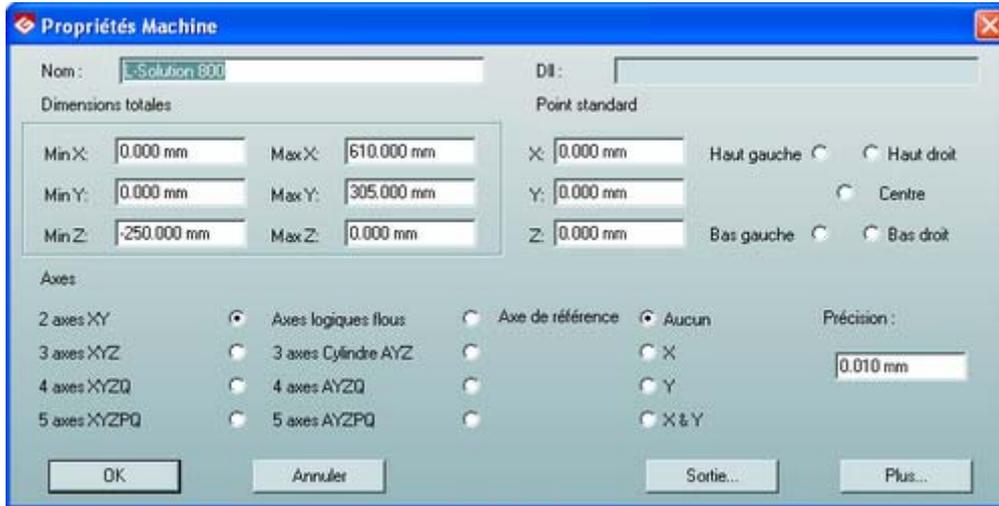

Drive a laser machine with your usual graphical editor (Corel Draw, Autocad, Adobe Illustrator...)

Set up Gravograph L-Solution driver.

To set up driver use L-Solution CD delivered with your machine.

Set the softlink between PC and engraving machine.

Open a new document in your **usual graphical editor (Corel Draw™, AutoCad™, Adobe Illustrator™, etc.)**.

Set objects to engrave (text, vectorial logos, bitmap images).

Set each object properties (contour thickness, surface, color).

Enable Print command.

In Printer Selection, **click the printer named exactly like your engraving laser machine**

OK Click.

Configure laser engraving using L-Solution dialog box commands (more information in Gravograph manual delivered with laser machine).

Frequently Asked Questions :

What is a bidirectional laser machine ?


Without modification of the postpros in Gravostyle 5 Version 4 Build 2 : it is the LS100 and LS100 Ex machines
These machines have a CPU USB (UC_K2000) and allow a bidirectional communication between PC and laser machine.
The other laser machines don't have systematically a CPU USB, that is why the bidirectionality in the postpro is not activated by default. The postpros with the bidirectionality for LS800 and LS900 (if CPU USB) are available in
C:\GravoStyle5400\PostPro\Bidirectional LS800 LS900 postpro. So copy and paste it in the postpro folder and then install the laser machine in GS5

How to know if the firmware of the machine is "Plug & Play"?

Plug a single machine onto an USB port of your PC
Power up it

→ if nothing happens on the PC, then the version of the firmware is not "Plug & Play"

If the firmware is "Plug & Play", Found New Hardware wizard is lunched and these kind of tooltips display if Gravograph drivers has already installed :

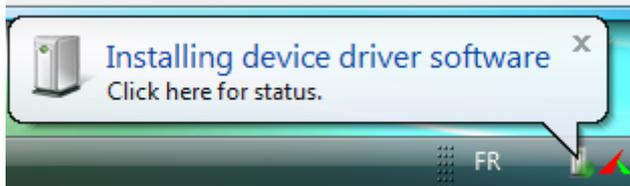


To know if the firmware is "Plug & Play", check the number of the version of the firmware : look at below :


How to know the name of the machine and the version of the firmware ?

Open the folder with MajFirmware tool :


- If GravoStyle5 Version 4 is already installed, open C:\Gravostyle5400\Firmware\ folder

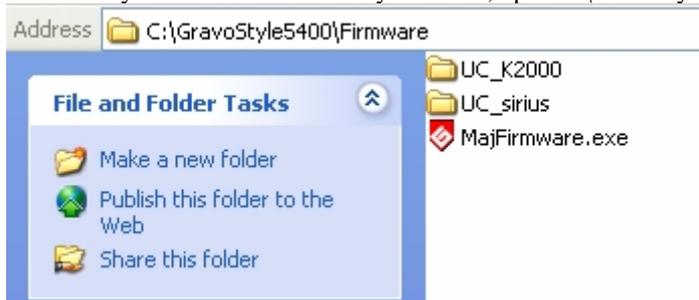

- If not, Explore the « Gravostyle5 Version 4 » DVD : D:\Firmware folder

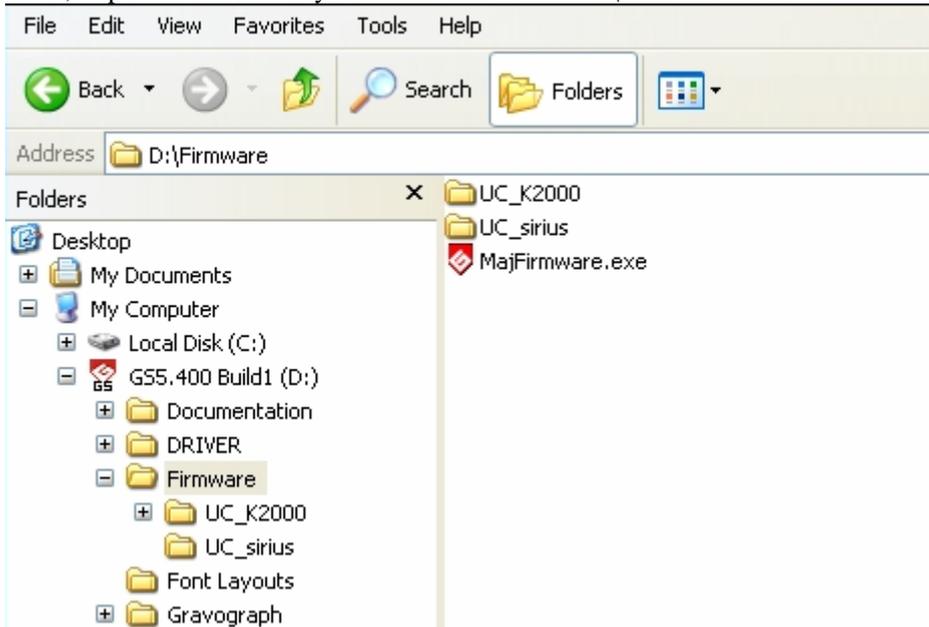

Double-click on MajFirmware.exe :
 Wait for the display of the name of the machine and the version of the firmware :

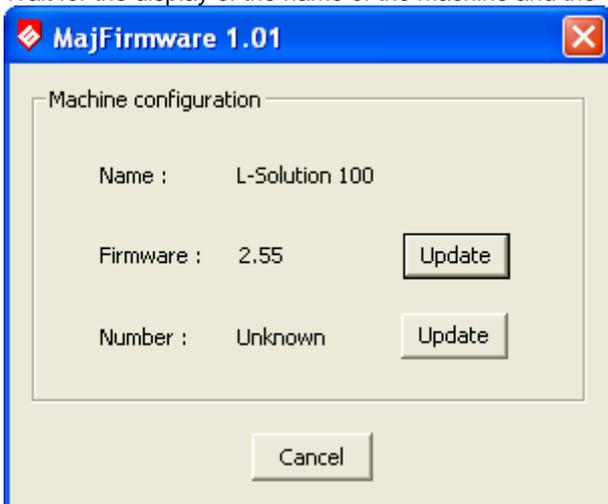

Number = « Unknown » is displayed if the firmware is not Plug & play.

Sirius card : Plug & Play : at least number **1.37**
 Mono board M-series
 USB card for M20 / M40



UC K2000 card : Plug & Play : at least number **2.61**
 CPU USB for IS – LS machines
 USB card for IS machine and laser machine



Is there an order to install several machines plugged on the same PC ?

Only rotary machines : NO
 Only laser machine : NO

Rotary and laser machines : YES : it is necessary to begin with Rotary machine :

Explanations :

When a bidirectional laser machine is installed with Gravostyle5, a GT Smartstream driver is installed with Lsolution driver. The setup.exe of GT Smartstream deletes every GT Smartstream drivers already installed. So le driver for the laser machine would be deleted...

Which driver to use with a machine ?

By default :

With GravoStyle5 V4 :

M20, M20 IQ, M20 Jewel, M20 Jewel 2, M20 Jewel IQ, M20 XL, M20 XL IQ, M40 IQ, M40 USB, M40 Volume IQ, M40G IQ, M40G USB, IS400 IQ, IS400 PNS, IS400 Volume IQ, IS400 Volume PNS,	GTSmartstream
IS200, IS200 IQ, IS400, IS400 Volume, IS700, IS6000, IS6000 IQ, IS6000 XP, IS 7000, IS 7000 IQ, IS7000 XP, IS 8000, IS 8000 IQ, IS8000 XP	Generic Text Only
L100, LS100 Ex	LSolution + GTSmartstream
LS800, LS900	LSolution

Particular cases :

- For the machine without red led (point & shoot functions), Generic Text only driver is used except if a modification is done in the postpro in order to use the spindle for point & shoot function (instead of the led) : in these specific cases, GT Smartstream driver must be used

- For the LS800 and LS900 with USB Card (UC_K2000), 2 specific postpros can be used in order to activate the "Point & Shoot" functions. So, GT Smartstream must be used, too.